

2012

Chevrolet Sonic

ABOUT THE VEHICLE



Make: Chevrolet
 Model: Sonic
 Year: 2012



Available on the
App Store

Scosche Pro App

STANDARD/ OPTIONAL

- AM/FM/CD/MP3/SAT Radio
- 3.5mm Aux/USB ipod input
- Steering Wheel Controls
- Bluetooth
- OnStar

SCOSCHE®

SPEAKER NOTES

Front Speakers

A-Pillar Speaker:	1"
Upper Door:	N/A
Lower Door:	6 1/2"
Speaker Adapter:	SAGMHR634
Speaker Harness:	N/A
Speaker Assembly:	(1) 7mm Screw Securing Speaker

Dimensions:

A-Pillar	Speaker
L: 1.56"	L: 6.37"
W: 1.56"	W: 6.37"
D: 0.56"	D: 2.75"

Rear Speakers

Lower Door:	6 1/2"
Subwoofer:	TBA
Speaker Adapter:	SAGMHR634
Speaker Harness:	N/A
Speaker Assembly:	(1) 7mm Screw Securing Speaker

Dimensions:

Speaker	Subwoofer:
L: 6.37"	L: TBA
W: 6.37"	W: TBA
D: 2.75"	D: TBA

APPLICATIONS

Dash Type:	New Custom Dash
Aftermarket Type:	Double Din
Aftermarket Kit:	GM5204B
Harness:	GM27SR
Antenna Adapter:	VWA3B
Amplifier Location:	TBA
Auxiliary Input:	Glove Box
USB Input:	Glove Box

FACTORY COLOR CODES

(+)12v Battery:	Red/Blue
(+)12v Accessory:	Data
(-) 12v Ground:	Black
(+)12v Amp Turn On:	N/A
Left Front Speaker (+):	Yellow
Left Front Speaker (-):	Yellow/Black
Right Front Speaker (+):	Blue
Right Front Speaker (-):	Purple/Black
Left Rear Speaker (+):	Green
Left Rear Speaker (-):	Green/Black
Right Rear Speaker (+):	White
Right Rear Speaker (-):	Blue/Black

PRELIMINARY:

Disconnect the negative battery cable.

Make: Chevrolet

Model: Sonic

Year: 2012



Scosche Pro App

Available on the App Store

RADIO REMOVAL



1. With PRT unclip radio bezel and remove.
2. Extract (4) 7mm. Screws from radio.
3. Unplug and remove radio.

A-PILLAR TWEETER



1. Use PRT to unclip the a-pillar, unplug and remove.
2. Use PRT to remove the tweeter from the a-pillar.

FRONT DOOR SPEAKERS



1. Use PRT to unclip plastic cover and remove.
2. Use PRT to remove plastic cover behind door handle.
3. Unscrew (1) T-20 torx behind the panel just removed.
4. Use PRT to remove rubber cover located in the door grab.
5. Unscrew (1) T-20 torx behind the rubber cover just removed.
6. Use PRT to unclip the door panel, unplug and remove.
7. Unscrew (1) 7mm bolt securing the speaker, unplug and remove.

REAR DOOR SPEAKERS



1. Use PRT to remove plastic cover behind door handle.
2. Unscrew (1) T-20 torx behind the panel just removed.
3. Use PRT to remove rubber cover located in the door grab.
4. Unscrew (1) T-20 torx behind the rubber cover just removed.
5. Use PRT to unclip the door panel, unplug and remove.
6. Unscrew (1) 7mm screw securing the speaker, unplug and remove.