

2009-10 Dodge Journey

ABOUT THE VEHICLE



Make: Dodge
 Model: Journey
 Year: 2009-10



Scosche App

STANDARD/OPTIONAL

- AM/FM/Multi in-dash CD Player
- RDS/MP3/WMA/Sat. Radio
- DVD/DVD Audio
- Bluetooth
- Steering Wheel Controls
- 3.5mm AUX
-

SCOSCHE®

SPEAKER NOTES

Front Speakers:

Dash:	3 1/2"
Pillar:	N/A
Upper Door:	N/A
Lower Door:	6X9"
Speaker Adapter:	N/A
Speaker Harness:	TBA
Speaker Assembly:	(4) T-20 Torx Screws
Speaker Assembly:	TBA

Dimensions:

Dash	Door
L: 3.406	L: 6.485
W: 3.406	W: 9.281
D: 1.555	D: 3.096

Rear Speakers:

Upper Door:	N/A
Lower Door:	6X9"
Side Panel:	TBA
Rear Deck:	N/A
Speaker Adapter:	N/A
Speaker Harness:	TBA
Speaker Assembly:	(4) Torx Screws
Speaker Assembly:	TBA

Dimensions:

Door	Rear	Sub
L: 6.485	L: 0.000	L: 0.000
W: 9.281	W: 0.000	W: 0.000
D: 3.096	D: 0.000	D: 0.000

APPLICATIONS

Dash Type:	New Custom Dash
Aftermarket Type:	Single/Double Din

Aftermarket Kits:

Aftermarket Kit:	CR1288B
Aftermarket Kit:	TBA

Harness/Interface/Adapters:

Radio Harness:	CR06SR?
Antenna Adapter:	VWA3B
Blue Fusion/Bluetooth:	TBA
AUX / iPod Interface:	TBA

Other:

Auxiliary / 3.5mm:	On Radio
USB Input:	TBA
Factory Amplifier:	TBA

FACTORY COLOR CODES

12v Battery (+):	Yellow/Red
12v Accessory (+):	Data
12v Ground (-):	Black
12v Amp Turn On (+):	Data
Illumination:	Data
Left Front Speaker (+):	Gray/Purple
Left Front Speaker (-):	Gray/Yellow
Right Front Speaker (+):	Green/Purple
Right Front Speaker (-):	Green/Yellow
Left Rear Speaker (+):	Gray/lit. Green
Left Rear Speaker (-):	Gray/drk. Green
Right Rear Speaker (+):	Green
Right Rear Speaker (-):	Green/Gray

PRELIMINARY:

Disconnect the negative battery cable.

Make: Dodge
Model: Journey
Year: 2009-10



RADIO



1. Open Pocket above A/C vents and with Panel Removal Tool, unclip Radio/AC Panel, unplug and remove.
2. Extract (4) T-20 Torx screws securing Radio, unplug and remove.

DASH SPEAKERS



1. Remove left and right front doors rubber weather strip and with Panel Removal Tool, unclip upper side panels.
Note: Panels have an Airbag safety lock.
2. With Panel Removal Tool, unclip and remove Speaker grill/Panel.
3. Using an angle driver, extract (2) Phillips Head Screws securing Speaker, unplug and remove.

FRONT DOOR SPEAKERS



1. With Pick Tool, unclip Panel inside door handle and extract (1) 10mm screw and (1) Phillips Head Screw revealed.
2. With flat head screwdriver, unclip screw cap inside door handle/grip and extract (1) T-30 Torx screw revealed.
3. With Panel Removal Tool, unclip windows control panel, unplug and remove.
4. With Panel Removal Tool, unclip door Panel, unplug and remove.
5. Extract (4) T-20 Torx screws securing Speaker, unplug and remove.

REAR DOOR SPEAKERS



1. With Pick Tool, unclip Panel inside door handle and extract (1) 10mm screw and (1) Phillips Head Screw revealed.
2. With flat head screwdriver, unclip screw cap inside door handle/grip and extract (1) T-30 Torx screw revealed.
3. With Panel Removal Tool, unclip door Panel, unplug and remove.
4. Extract (4) T-20 Torx screws securing Speaker, unplug and remove.