

2009-12 Toyota Corolla

ABOUT THE VEHICLE



SCOSCHE®

SPEAKER NOTES

Front Speakers

Upper Door:	1"
Lower Door:	6 3/4"
Speaker Adapter:	SAT6
Speaker Harness:	TBA
Speaker Assembly:	Factory rivet to metal

Dimensions:	Tweeter	Door
	L: 1.87"	L: 5.50"
	W: 1.87"	W: 5.50"
	D: 1.25"	D: 2.60"

Rear Speakers

Deck:	6x9"
Speaker Adapter:	SAT69
Speaker Harness:	TBA
Speaker Assembly:	(4) 10mm bolts

Dimensions:	Rear Deck
	L: 6.50"
	W: 9.37"
	D: 15.0"

Make: Toyota
Model: Corolla
Year: 2009-12

STANDARD/ OPTIONAL

- AM/FM/MP3/WMA in-dash multi CD Player
- 3.5mm Aux/mp3 input / USB
- Satellite Radio Compatible
- Steering Wheel Controls
- 6 Speaker STD. / 8 Speaker JBL Synthesis

APPLICATIONS

Dash Type:	Custom Dash
Aftermarket Type:	Single/Double DIN
Aftermarket Kit (1):	Black dash: TA2101B
Aftermarket Kit (2):	Gray dash: TA2101DGB
Harness:	TA02B/TA07SR (JBL system)
Antenna Adapter:	Not required
Amplifier Location:	Under Passenger seat
Auxiliary Input:	Below radio

FACTORY COLOR CODES

(+)12v Battery:	Blue/Yel
(+)12v Accessory:	Gray
(-) 12v Ground:	Brown
(+)12v Amp Turn On:	DATA controlled
Left Front Speaker (+):	Pink
Left Front Speaker (-):	Purple
Right Front Speaker (+):	Green
Right Front Speaker (-):	Lt. Blue
Left Rear Speaker (+):	Black
Left Rear Speaker (-):	Yellow
Right Rear Speaker (+):	Red
Right Rear Speaker (-):	White

2009-12 Toyota Corolla

VEHICLE DISASSEMBLY

PRELIMINARY:

Disconnect the negative battery cable.

Make: Toyota

Model: Corolla

Year: 2009-12

RADIO REMOVAL



1. With Panel Removal Tool, unclip both panels along each side of shifter and remove.
2. Extract (2) screws from Aux input panel.
3. With Panel Removal Tool, unclip shifter/pocket bezel, unplug and remove.
4. With Panel Removal Tool, unclip Auxiliary port panel, unplug and remove.
5. With Panel Removal Tool, unclip vertical panels at sides of radio.
6. With Panel Removal Tool, unclip Air vent panel, unplug and remove.
7. Extract (4) 10mm bolts securing radio, unplug and remove.

FRONT TWEETER

1. With Panel Removal Tool, unclip Tweeter/side mirror Panel, unplug and remove.



FRONT DOOR / TWEETER



1. With Panel Removal Tool, unclip Tweeter/side mirror Panel, unplug and remove.
2. With Panel Removal Tool, unclip screw cover behind door release handle and extract (1) Phillips Head screw.
3. With Panel Removal Tool, unclip screw cover in door pull handle and extract (1) Screw from behind.
4. With Panel Removal Tool, unclip power window switch panel, unplug, lift and remove.
5. With Panel Removal Tool, unclip fasteners around panel, unclip door release handle and remove panel.
6. Unplug Speaker/Adapter, drill 3 rivets out and remove speaker.

REAR DECK



1. Fold rear seat sections forward.
2. Carefully pull off weatherstrip around rear C-pillar panels.
3. Use a panel removal tool to unclip lower plastic side trim panels, upper side pillar panels.
4. Slightly lift rear deck cover to access clips, use a Panel Removal Tool to unclip, unplug 3rd brake light and remove.
5. Unplug Speaker and remove by extracting (4) Phillips Head/10mm screws.