

**2002-2003
CHRYSLER/DODGE
TOWN AND COUNTRY/CARAVAN**



Year: 2001-2003 Make: Chrysler/Dodge Model: Town & Country/Caravan

IN-DASH APPLICATION:

Dash Type: Chrysler Contoured Kit: CR1277 Harness: CR02

Antenna Adapter: CRA Factory Amplifier: Infinity on some models

DASH SPEAKERS: 5 1/4" 2 Hole Pin Cushion Depth 4 3/4"

WHEN INSTALLING AN AFTERMARKET 5 1/4" SPEAKER, NO ADAPTER IS REQUIRED.

FRONT SPEAKERS:

Door Speakers: 6x9" Standard Depth 3"

WHEN INSTALLING AN AFTERMARKET 5 1/4" OR 6 1/2" SPEAKER, SA69 ADAPTER IS REQUIRED.

REAR SPEAKERS:

Rear Side Panel Speakers: 6x9" Standard Depth 4"

WHEN INSTALLING AN AFTERMARKET 5 1/4" OR 6 1/2" SPEAKERS, SA69 ADAPTER IS NEEDED.

WIRE COLOR CODES:

+12V Constant	=	Grey/Red
+12V Accessory Switched	=	Blue/Pink
-12V Chassis Ground	=	Strap
+12V Illumination	=	NA
+12V Dimmer	=	Orange/Gold
Power Antenna	=	N/A
Amp Remote	=	N/A
LF+	=	Green
LF-	=	Green/Black
RF+	=	Grey
RF-	=	Grey/Black
LR+	=	Green/Blue
LR-	=	Green/Orange
RR+	=	Grey/Blue
RR-	=	Grey/Orange

2001 Chrysler Town and country Minivan

PRELIMINARY: Disconnect the negative battery cable.

ANTENNA: The factory antenna is located atop the passenger's side front fender.

RADIO REMOVAL AND IN-DASH INSTALLATION:

Note: The factory radio provision is for a custom contoured Chrysler DIN+1/2 style. An installation kit is necessary when using an Aftermarket radio. We recommend the use of a Scosche CR1277 kit.

1. Open drink holder and remove screw cover panel at bottom of radio bezel, extract (2) phillips screws from behind.
2. Using a panel removal tool, unsnap, disconnect, and remove the dash bezel.
3. Extract (4) Philips head screws securing radio, lift away, disconnect and remove.



DASH SPEAKER REMOVAL AND INSTALLATION:

Note: The factory provision is for a 5 1/4" 2-hole pin cushion speaker mounted to the dash. No adapter is needed when installing an aftermarket 5 1/4" speaker.

1. Remove "A" pillar panels using panel removal tool, on passengers side you must remove passenger assist handle by extracting (2) 10mm bolts first.
2. Pry upwards on front of dash panel, then pull out to remove once all fasteners are loose.
3. Extract (2) Philips screws securing speaker, disconnect and remove.



FRONT DOOR SPEAKER REMOVAL AND INSTALLATION:

Note: The factory speaker provision is for a 6x9" 4-hole pin cushion speaker mounted to the door. When installing an aftermarket 5 1/4" or 6 1/2" speaker, we recommend the use of a Scosche SA69 speaker adapter.

1. Extract (1) Philips head screws from bottom front portion of door panel.
2. Remove screw cover from door handle and extract (1) phillips screw from behind.
3. Remove screw cover from door cup and extract (1) Philips screw from behind.
4. Using a panel removal tool, pry off the door panel, disconnect and remove.
5. Extract (4) Philips head screws securing speaker, lift away, disconnect and remove.



REAR SPEAKER REMOVAL AND INSTALLATION:

Note: The factory speaker provision is for a 6x9" mounted in the rear side panels.

1. Pry off speaker grille, lift away and remove.
2. Extract (4) Philips head screws securing speaker, lift away, disconnect and remove.