

# 2006-07 Dodge Ram

## About the Vehicle

Make: Dodge  
Model: Ram  
Year: 2006-07

### Standard/Optional

CD Player  
In-Dash 6 Disc Changer  
Aux-Input  
Sirius Radio  
Infinity System ( 9 Speaker System)  
Navigation  
Rear Seat DVD System

## In Dash Application

Dash Type: Din and 1/2  
Aftermarket Type: Single Din  
Kit: CR1286B/CR1289B  
Harness: CRAB/CRARB

**Interface Adapter(s):**  
**CAN-Bus protocol.(TBA)**

## Wire Color Codes

Type: Standard Audio System Location: At Speakers

+12v Constant = Gray/Red

+12v Acc. Switch =

-12v Chassis Ground= Black/Green

+12v Illumination =

+12v Dimmer =

Amp Remote =

Can-Bus = White/Orange(+)/White(-)

LF+ = Green/Yellow

LF- = Green/Lt. Blue

RF+ = Gray/Yellow

RF- = Gray/Lt. Blue

LR+ = Gray/Lt. Green

LR- = Gray/Drk. Green

RR+ = Green/Lt. Green

RR- = Green/Gray



**SCOSCHE**®

## Speaker Notes

### Front Speaker Sizes

Front Dash : 3" Fullrange  
Lower Door: 6X9 Midbass  
Speaker Adapter: SA69  
Speaker Harness: TBA  
Factory Assembly: (4) Phillips Head screws securing speaker.

#### Dimensions:

W= 9"

L= 3"

D= 7"

NOTES

### Rear Speaker Sizes

Rear Deck: 6.5" Midrange  
Factory Assembly: (3) Phillips head screws securing speaker.

#### Dimensions:

W= 5.75"

L= 2-3/8"

D= 5.75"

NOTES

# 2006-07 Dodge Ram

SCOSCHE®

Recommended: Disconnect negative battery cable

## Radio removal

1. Fold down cup holder panel in center lower dash. Extract (2) 9/32" PHS from underneath dash panel above cup holders.
2. Using a PRT remove entire radio bezel and HVAC controls. Disconnect and remove.
3. Extract (4) 9/32" PHS securing the radio to the dash. Disconnect and remove.

## Front Speakers

### Dash Tweeter

1. Using a PRT remove entire top dash panel covering dash speakers.
2. Extract (2) PHS securing the speaker to the dash. Disconnect and remove.

### Door Speakers

1. Extract (1) PHS from the side mirror panel.
2. Extract (2) PHS from bottom portion of door panel.
3. Extract (1) 10mm bolt securing the door release handle to the door release handle bracket. Remove the door release handle.
4. Extract (1) PHS from the door panel next to the door release handle.
5. Lift entire door panel upwards to release door panel from door steel. Disconnect and remove.
6. Extract (4) PHS securing the speaker to the door steel. Disconnect and remove.

## Rear Speakers

### Door Speakers


1. Extract (1) 10mm bolt securing the door release handle to the door release handle bracket. Remove the door release handle.
2. Extract (1) PHS from the door panel next to the door release handle.
3. Lift entire door panel upwards to release door panel from door steel. Disconnect and remove.
4. Extract (3) PHS securing the speaker to the door steel. Disconnect and remove.

## Images

### Radio



### Front Speakers

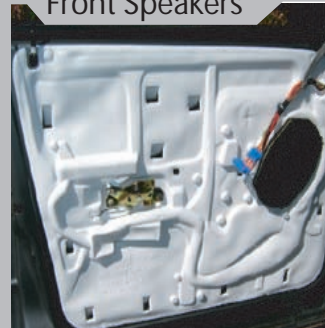

Dash Fullrange

### Rear Speakers

