

## ABOUT THE VEHICLE



Make: Ford  
 Model: Escape  
 Year: 2008-12



### STANDARD/ OPTIONAL

- AM/FM/SAT/Multi CD Player
- 3.5mm Aux/mp3
- 4 Speakers Sound System

## SCOSCHE®

### SPEAKER NOTES

#### Front Speakers

Upper Door:	N/A
Lower Door:	6X8"
Speaker Adapter:	SA68
Speaker Harness:	SHFD03B
Speaker Assembly:	(4) Screws

#### Dimensions:

Door  
 L: 5.735  
 W: 8.020  
 D: 2.620

#### Rear Speakers

Lower Door:	6X8"
Speaker Adapter:	SA68
Speaker Harness:	SHFD03B
Speaker Assembly:	(4) Screws

#### Dimensions:

Door  
 L: 5.735  
 W: 8.020  
 D: 2.620

### APPLICATIONS

Dash Type:	New Custom Dash
Aftermarket Type:	Single/Double Din
Aftermarket Kit:	FD1436/FD1436BLKB
Harness:	FDSR
Antenna Adapter:	CRAB/CRARB
Blue Fusion/Bluetooth:	BT1000/BT1200
AUX Interface:	TBA
Auxiliary/USB Input:	Under Radio/AC Panel
Amplifier Location:	TBA

### FACTORY COLOR CODES

(+)12v Battery:	White/Red
(+)12v Accessory:	Data
(-) 12v Ground:	Black/Gray
(+)12v Amp Turn On:	Data
Left Front Speaker (+):	White
Left Front Speaker (-):	White/Black
Right Front Speaker (+):	White/Purple
Right Front Speaker (-):	White/Orange
Left Rear Speaker (+):	White/Green
Left Rear Speaker (-):	Brown/Yellow
Right Rear Speaker (+):	Brown/White
Right Rear Speaker (-):	Brown/Blue

# 2008-12 Ford Escape

## VEHICLE DISASSEMBLY

### PRELIMINARY:

Disconnect the negative battery cable.

Make: Ford

Model: Escape

Year: 2008-12



Available on the  
App Store

### RADIO



1. Use a panel removal tool (PRT) to unsnap upper vent panel. Start from windshield and pull toward you.
2. Use a PRT to unsnap dash panel below stereo.
3. Extract (4) 7mm hex head screws securing stereo panel.
4. Use 8mm wrench to remove ground strap from passenger side of stereo.
5. Unplug and remove stereo.
6. Extract (4) T-20 Torx head screws securing stereo brackets.
7. Extract (4) T-20 Torx head screws securing A/C controls.

### AUX/3.5mm



1. With Panel Removal Tool, unclip MP3/USB Panel below Radio/AC Panel, unplug and remove.

### FRONT DOOR SPEAKERS



1. Extract (2) Phillips Head Screws located at the left inner & outer panel.
2. With Pick Tool, remove cover on door handle and extract (1) T-30 Torx screw.
3. With Panel Removal Tool, remove windows control panel, unplug and remove.
4. With Panel Removal Tool, unclip door panel, unplug and remove.
5. Extract (4) 7mm screws securing speaker, unplug and remove.

### REAR DOOR SPEAKERS



1. Extract (2) Phillips Head Screws located at the left inner & outer panel.
2. With Pick Tool, remove cover on door handle and extract (1) T-30 Torx screw.
3. With Panel Removal Tool, remove windows control panel, unplug and remove.
4. With Panel Removal Tool, unclip door panel, unplug and remove.
5. Extract (4) 7mm screws securing speaker, unplug and remove.