



SCOSCHE®

SPEAKER NOTES

Front Speakers

Door Speaker:	5x7
Lower Door:	N/A
Speaker Adapter:	N/A
Speaker Harness:	SHFD03B
Speaker Assembly:	(4) 5mm screws

Notes:

Dimensions: Speaker

L: 5.2"

W: 7.4"

D: 2"

Rear Speakers

Door Speaker:	5x7
Speaker Adapter:	N/A
Speaker Harness:	SHFD03B
Speaker Assembly:	(4) 5mm screws

Notes:

Dimensions: Speaker

L: 5.2"

W: 7.4"

D: 2.4"

Make:	Ford
Model:	F-150 Lariat/Platinum
Year:	2009-12

STANDARD/ OPTIONAL

- AM/FM Multiple in-dash CD Player
- Sat. Radio Capable
- USB/3.5mm Aux/mp3 input
- Remote display above radio
- Steering Wheel Radio Controls
- 4 Speaker Sound System

APPLICATIONS

Dash Type:	New Custom Dash
Aftermarket Type:	Single/Double Din
Aftermarket Kit:	FD1442B
Harness:	FDSR
Antenna Adapter:	CRAB/CRARB
Amplifier Location:	N/A

Interface Applications:	FDSR
iPod Interface:	N/A
Auxiliary Input:	USB/3.5mm Aux on- Radio Panel.

FACTORY COLOR CODES

(+)12v Battery:	White/Red
(+)12v Accessory:	Data
(-) 12v Ground:	Black/Blue
(+)12v Amp Turn On:	Data
Left Front Speaker (+):	White
Left Front Speaker (-):	White/Brown
Right Front Speaker (+):	White/Purple
Right Front Speaker (-):	White/Orange
Left Rear Speaker (+):	White/Green
Left Rear Speaker (-):	Brown/Yellow
Right Rear Speaker (+):	Brown/White
Right Rear Speaker (-):	Brown/Blue

PRELIMINARY:

Disconnect the negative battery cable.

Make: Ford

Model: F-150 Lariat/Platinum

Year: 2009-12

RADIO REMOVAL



1. With panel removal tool, remove the rubber mat pad Radio, in front of Radio display and remove (2) 7mm screws securing the top of the Radio face plate.
2. With panel removal tool, unsnap small panel next to cig lighter. USB/3.5mm panel and extract (1) 7mm screw.
3. With panel removal tool, unsnap dash/vent panels on either side of the Radio but don't remove. Just pop out about an inch, just enough to slide Radio face plate out.
4. With panel removal tool, unsnap complete Radio/ac panel, unplug and remove.
5. Extract (4) 7mm screws securing Radio, unplug and remove.

TWEETERS

N/A

FRONT SPEAKERS



1. With panel removal tool, remove plastic panel inside door handle and extract (1) 8mm screw.
2. With pick tool, remove plastic screw cover inside door grip and extract (1) 8mm screw.
3. Extract (2) 6mm screws underneath the door panel.
4. Lift and pull door panel then unplug all harnesses and door handle cable and remove.
5. Extract (4) 5mm screws securing Speaker, unplug and remove.

REAR SPEAKERS



1. With panel removal tool, remove plastic panel inside door handle and extract (1) 8mm screw.
2. With panel removal tool, remove panel above door panel, next to window and extract (1) 6mm screw.
3. Extract (2) 6mm screws underneath the door panel.
4. Lift and pull door panel then unplug harness and door handle cable and remove.
5. Extract (4) 5mm screws securing Speaker, unplug and remove.