



Make: Honda  
 Model: Odyssey  
 Year: 2011-12



Scosche Pro App

### STANDARD/ OPTIONAL

- AM/FM in-dash CD Player
- Navigation Radio
- Satellite Radio
- Steering Wheel Controls
- Bluetooth
- Rear Seat Entertainment

## SCOSCHE®

### SPEAKER NOTES

#### Front Speakers

Dash Speaker:	1 1/2"
Lower Door:	6 1/2"
Speaker Adapter:	SAHC634
Speaker Harness:	SHHA02B
Speaker Assembly:	(1) Phillips Head Screw Securing Speaker

Dimensions:	Tweeter	Door
	L: 1.12"	L: 6.62"
	W: 1.12"	W: 6.62"
	D: 0.75"	D: 2.56"

#### Rear Speakers

Rear Door:	6 1/2"
Subwoofer:	8"
Speaker Adapter:	SAHC634
Speaker Harness:	SHHA02B
Speaker Assembly:	(1) Phillips Head Screw Securing Speaker

Dimensions:	Door	SUB
	L: 6.62"	L: 8.56"
	W: 6.62"	W: 8.56"
	D: 2.56"	D: 3.50"

### APPLICATIONS

Dash Type:	New Custom Dash
Aftermarket Type:	TBA
Aftermarket Kit:	TBA
Harness:	HA11B
Antenna Adapter:	HAA2B
Amplifier Location:	TBA
Auxiliary Input:	On Lower Console Below 12Volt Power Outlet
USB Input:	Inside Center Console

### FACTORY COLOR CODES

(+)12v Battery:	Orange
(+)12v Accessory:	Purple
(-) 12v Ground:	Brown
(+)12v Amp Turn On:	Pink
Left Front Speaker (+):	Green
Left Front Speaker (-):	Red
Right Front Speaker (+):	Gray
Right Front Speaker (-):	Blue
Left Rear Speaker (+):	Gray
Left Rear Speaker (-):	Orange
Right Rear Speaker (+):	Pink
Right Rear Speaker (-):	Purple

### PRELIMINARY:

Disconnect the negative battery cable.

Make: Honda

Model: Odyssey

Year: 2011-12



Available on the App Store

Scosche Pro App

### RADIO



1. Pull handle on center console to release then remove.
2. Use PRT to unclip panel to the left of the radio and remove.
3. Use PRT to unclip side window defroster panel and remove.
4. Use PRT to unclip side dash panel and remove.
5. Use PRT to unclip panel to the right of the radio and remove.
6. Use PRT to unclip a/c panel, unplug and remove.
7. Use PRT to unclip right side panel of lower console and remove.
8. Use PRT to remove clip on left side panel of lower console.
9. Use PRT to unclip left side panel of lower console and remove.
10. Unscrew (2) phillip head screws, (1) located on both sides of lower console behind panels that were just removed.
11. Unscrew (4) phillip head screws securing lower console.
12. Use PRT to unclip lower console, unplug and remove.
13. Unscrew (4) 8mm bolts securing radio.
14. Unplug radio and remove.

### DASH SPEAKERS



1. Use PRT to unclip grill.
2. Unplug and remove.

### FRONT DOOR SPEAKERS



1. Use PRT to unclip plastic cover.
2. Unscrew (1) phillips head screw located in pocket below window switch.
3. Use flathead screwdriver to remove plastic cover behind door handle.
4. Unscrew (2) phillip head screws located behind the panel that was just removed.
5. Use PRT to loosen door handle.
6. Use PRT to unclip window switch, unplug and remove.
7. Unscrew (1) phillips head screw located behind the panel that was just removed.
8. Use PRT to unclip door, unplug harness and remove.
9. Unscrew (1) phillips head screw securing speaker, unplug and remove.

### REAR DOOR SPEAKERS



1. Use PRT to unclip plastic cover.
2. Use cotter pin removal tool to remove door handle.
3. Use PRT to unclip door, unplug and remove.
4. Unscrew (1) phillips head screw securing speaker, unplug and remove.

**PRELIMINARY:**

Disconnect the negative battery cable.

Make: Honda

Model: Odyssey

Year: 2011-12



Scosche Pro App

Available on the  
App Store

**SUBWOOFER**

1. Use PRT to unclip sill plate and remove.
2. Unscrew (2) cargo net screws located on rear sill plate.
3. Use PRT to unclip rear sill plate and remove.
4. Use PRT to unclip panel between both rear side panels.
5. Unscrew (1) cargo net screw located on rear side panel.
6. Use PRT to unclip rear side panel, unplug and remove.
7. Unplug subwoofer harness.
8. Unscrew (4) 10mm bolts securing subwoofer enclosure.
9. Unscrew (4) T-15 torx securing the subwoofer to the enclosure, unplug and remove.

**AMPLIFIER**

TBA

**AUXILIARY**

Located on lower console below 12volt power outlet.

**USB**

Located in the center console.