

# 2011-12

# Hyundai Sonata

## ABOUT THE VEHICLE



Make: Hyundai  
Model: Sonata  
Year: 2011-12



Available on the  
App Store

Scosche Pro App

### STANDARD/ OPTIONAL

- AM/FM/MP3 in-dash CD Player
- 3.5mm Aux/USB ipod input
- Satellite Radio
- Steering Wheel Controls
- Bluetooth

## SCOSCHE®

## SPEAKER NOTES

### Front Speakers

Dash Speaker:	2 1/2"
Lower Door:	6 1/2"
Speaker Adapter:	TBA
Speaker Harness:	TBA
Speaker Assembly:	(4) T-15 Torx Securing Speaker

Dimensions:	Dash	Speaker
	L: 2.75"	L: 6.56"
	W: 2.75"	W: 6.56"
	D: 1.75"	D: 2.68"

### Rear Speakers

Lower Door:	6 1/2"
Speaker Adapter:	TBA
Speaker Harness:	TBA
Speaker Assembly:	(4) T-15 Torx Securing Speaker

Dimensions:	Speaker
	L: 6.56"
	W: 6.56"
	D: 2.68"

## APPLICATIONS

Dash Type:	New Custom Dash
Aftermarket Type:	Single/Double Din
Aftermarket Kit:	TBA
Harness:	HY12B/HY12RB
Antenna Adapter:	Not Required
Amplifier Location:	N/A
Auxiliary Input:	Under Radio Pocket
USB Input:	Under Radio Pocket

## FACTORY COLOR CODES

(+)12v Battery:	Red
(+)12v Accessory:	Blue/Red
(-) 12v Ground:	Black
(+)12v Amp Turn On:	N/A
Left Front Speaker (+):	Orange
Left Front Speaker (-):	Blue
Right Front Speaker (+):	Blue/Orange
Right Front Speaker (-):	Yellow/Orange
Left Rear Speaker (+):	Blue
Left Rear Speaker (-):	Green
Right Rear Speaker (+):	Gray
Right Rear Speaker (-):	White

### PRELIMINARY:

Disconnect the negative battery cable.

Make: Hyundai

Model: Sonata

Year: 2011-12



Scosche Pro App




## RADIO REMOVAL



1. Use PRT to remove trim on both sides of the center console.
2. Unscrew (2) phillip head screws one on each side of the radio.
3. Use PRT to remove radio bezel.
4. Unplug air bag/clock harness, hazard switch and a/c control and remove radio bezel.
5. Unscrew (4) phillip head screws securing the radio.
6. Unplug and remove.

## FRONT SPEAKERS

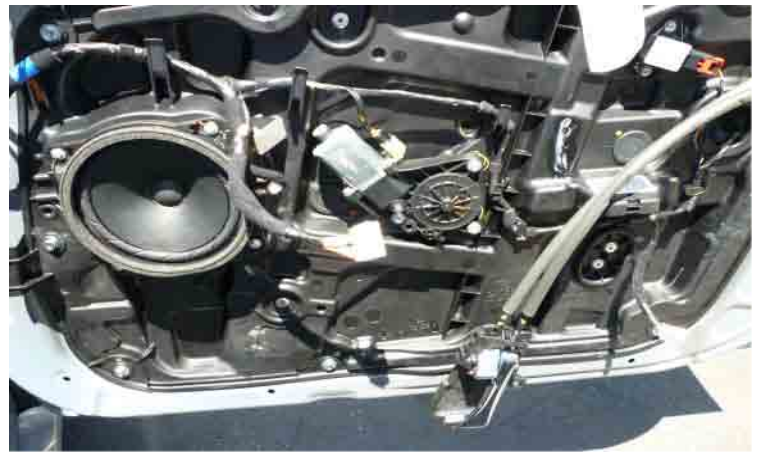

1. Use PRT to remove plastic mirror cover.
2. Use right angle pick to remove plastic cover behind door handle, unscrew (1) phillips head screw.
3. Use right angle pick to undo cap, unscrew (1) phillips head screw.
4. Use PRT to unclip door.
5. Unscrew (4) phillip head screws securing the door handle to door panel and remove.
6. Unplug and remove door panel.
7. Unscrew (4) T-15 torx screws, unplug and remove.

## TWEETERS



1. Use PRT to remove dash grille.
2. Use 8mm socket to remove screws. \*Recommended to loosen the screw closet to window with the ratchet then remove the screw by hand with socket only.
3. Unplug speaker harness and remove.

## REAR SPEAKERS



1. Use PRT to remove plastic cover.
2. Use right angle pick to remove plastic cover behind door handle, unscrew (1) phillips head screw.
3. Use right angle pick to remove screw cap, unscrew (1) phillips head screw.
4. Use right angle pick to remove screw cap, unscrew (1) phillips head screw.
5. Use PRT to unclip door.
6. Unscrew (4) phillip head screws securing the door handle to the door panel and remove.
7. Unplug switch plugs and remove door panel.
8. Unscrew (4) T-15 torx screws and unplug haness and remove speaker.