BASE-CLAMPS HOW IT WORKS:

STEP 1

Select the right size clamp (Various sizes sold separately)


STEP2

Select the base & ring clamp that coincides with what you need to mount 2A. Use protective film to prevent any paint damage 2B.

STEP3

Lock it in place

The self locking clamp design allows for easy one person installation. Simply slip the clamp over tube and lock in your base, secure using the stainless mounting hardware and you are ready to Mount Up and Move Out.

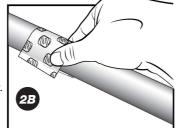



NOTE: Ring clamps 2" & over in size may require pre-stretching to help spread the clamp over the tube. (Use Protective film when mounting)

For complete warranty details, please visit us at www.scosche.com or call (800) 363-4490

Register your product online at WWW.SCOSChe.com/register

SCDSCUE"

PSM21011


GRAB HANDLE

PARTS INCLUDED

(1) 6" Base Grab Handle

TOOLS REQUIRED (Not Included)

3/16" Hex (Allen) Key, Except where noted

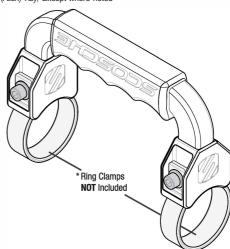

VARIOUS RING CIAMP SIZES SOLO SEPARATELY w/ HARDWARE"

PSC21006 - BaseClamp 1.5" Ring Clamp

PSC21007 - BaseClamp 1.625" Ring Clamp

PSC21009 - BaseClamp 1.75" Ring Clamp PSC21010 - BaseClamp 1.85" Ring Clamp

PSC21011 - BaseClamp 1.875" Ring Clamp

PSC21012 - BaseClamp 2" Ring Clamp



DO NOT RETURN PRODUCT IF YOU NEED ASSISTANCE OR REPLACEMENT PARTS CALL US TOLL FREE: 1-800-363-4490 x1

HOURS MON-FRI 8AM-5:30PM (PST) SATURDAY 8AM-2PM (PST)



