

Register your product online at www.scosche.com/register



PSM11007

MagicMount™ Pro Universal

MAGNETIC MOUNT FOR MOBILE DEVICES

- Mounts to flat surfaces such as top triple tree bracket, square tubing, instrument panel or console
- Features 3M adhesive base and elastic security band


Please Note

This product is not for use with hard-drive based MP3 players, including iPod and Zune. Incorrect use of this product may result in damage and will not be covered under the terms of the limited warranty.




IMPORTANT!
DO NOT RETURN PRODUCT TO THE RETAILER
IF YOU NEED ASSISTANCE OR REPLACEMENT PARTS
CALL US TOLL FREE: 1-800-621-3695 X1
HOURS MON-FRI 8AM-5:30PM (PST) SATURDAY 8AM-2PM (PST)


CONTENTS

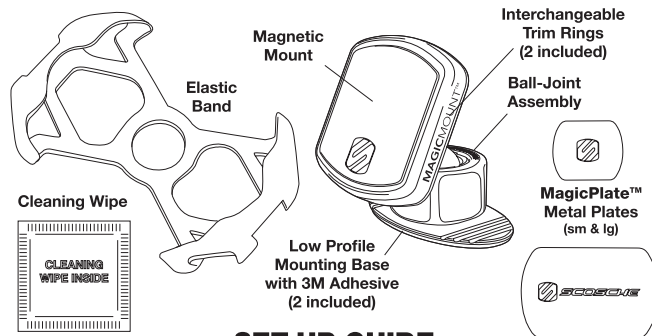

SET-UP GUIDE

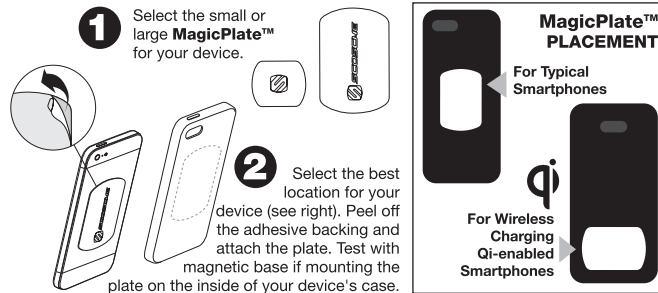

SET-UP GUIDE

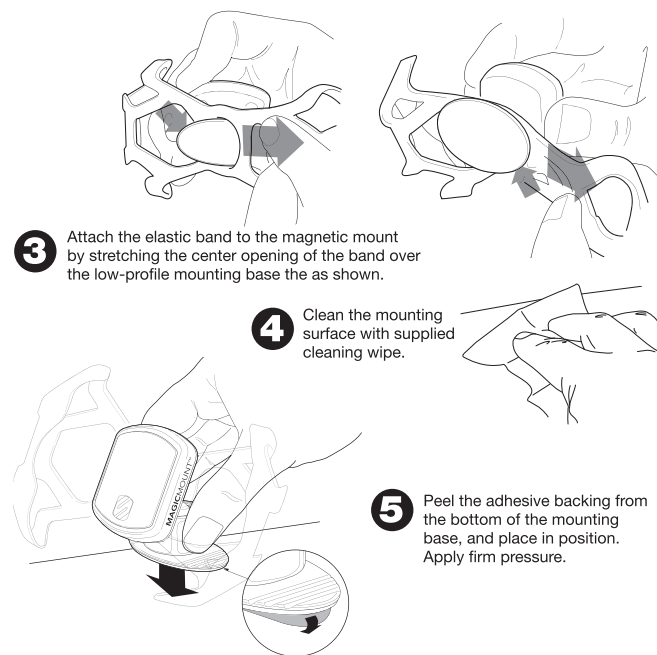


SET-UP GUIDE

- 6** Place your device against the magnetic mount so that the metal plate on the back of the device adheres to the magnetic mounting surface. Align the elastic band with your device and attach to the corners of your device as shown (A). The elastic band will secure your device while riding.

NOTE: Elastic band can be attached horizontally or vertically (B).

Loosen, then re-tighten the base to adjust for optimum viewing angle (C).

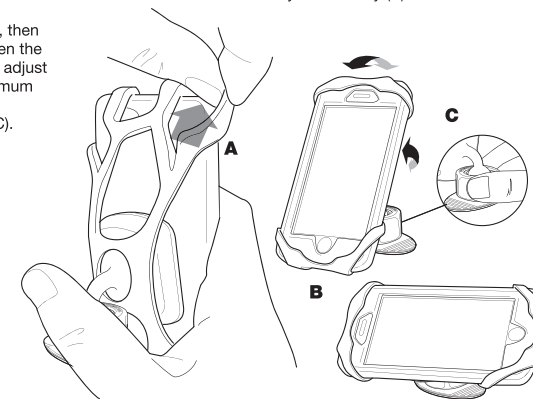

For complete warranty details, please visit us at www.scosche.com or call (800) 363-4490