

| TUNERS / CASSETTE / DISC PLAYERS | | | | | | RADIO EQ STACK |
|----------------------------------|--------------|--------------|--------------|--------------|-------------------|----------------------|
| | MINI | STAN | DIN | ISO DIN | SINGLE DBL DIN | |
| CHASSIS H | 1 1/2-2 | 2 | 2 | 2 | 3 7/8 | 3 |
| CHASSIS W | 7 1/8 | 7 1/8 | 7 1/8 | 7 | 7 1/8 | 7 1/8 |
| CHASSIS D | 4 1/2-5 1/2 | 5 1/8-6 1/16 | 5 1/8-6 1/16 | 5 1/8-6 1/16 | 5 1/8-6 1/16 | 5 1/8-6 1/16 |
| NOSE H | 1 1/2-1 3/4 | 1 1/2-1 3/4 | 2 1/8 | 1 13/16 | 3 1/2-4 | |
| NOSE W | 4 1/8-4 3/16 | 4 1/8-4 3/16 | 7 1/2 | 6 1/16 | 6 1/16-7 1/4 | |
| SHAFT SP. | 5 1/8-5 1/4 | 5 1/2-6 | | | | |

UPDATED
THROUGH
'96
'97
'98
'99

PONTIAC 1995-UP SUNFIRE

Coupe, Sedan

IN DASH APPLICATION NOTES

| | | | | | | |
|--|----------------|----------------|----------------|----------------|---|----------------|
| | K ^S | K ^S | K ^S | K ^S | N | K ^S |
|--|----------------|----------------|----------------|----------------|---|----------------|

APPLICATION KIT MODEL: GM1500 SERIES

HARNESS ADAPTOR: GM02

ANTENNA ADAPTOR: MDA-1

IN-DASH INSTALLATION AREA DIMENSIONS

| | DEPTH | MAX DEPTH | WIDTH | HEIGHT | |
|------------------------|-------------|---|-----------------|--------|--|
| CAVITY | 5 3/8" | 5 3/8" | 8 1/4" | 3 3/4" | |
| DASH OPENING | TYPE: M2000 | | 7 11/16" | 3 1/4" | |
| DASH MATERIAL: Plastic | | | THICKNESS: 1/8" | | |
| FOR MAX DEPTH | | <input type="checkbox"/> REMOVE REAR SUPPORT <input checked="" type="checkbox"/> MODIFY CAVITY (CUT OUT REAR WALL) | | | |


AMPLIFIER/EQ MOUNTING LOCATIONS (WxHxD)

| UNDER/IN DASH | UNDER SEAT | GLOVE BOX | TRUNK/ CARGO |
|------------------|---------------|--------------|-----------------|
| | | | Various |

Dimensions shown are inches.
For inch/mm conversions refer to chart section.

REAR DECK - SEDAN


Factory Provisions: 6 x 9" In adaptor
Aftermarket: 5 1/2"K, 8 1/2"K, 6 x 9



ADAPTOR
CAVITY W H D
5 1/8" x 6 1/4" x 20" to trunk floor

FRONT DOORS

Factory Provisions: 4 x 6" in factory adaptor
Aftermarket: 4"K, 4 x 6", 5 1/2"C2

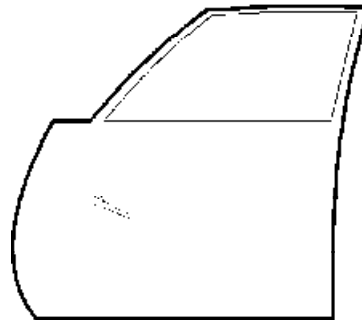

ADAPTOR
CAVITY W H D
6 1/8" x 4 1/8" x 3 1/8"



NOTE: THIS MANUAL IS BASED ON CAREFULLY DOCUMENTED RESEARCH. ABSOLUTE ACCURACY IS ATTEMPTED BUT NOT GUARANTEED. USE THIS MANUAL AS A REFERENCE GUIDE. SCOSCHE, INC. CANNOT BE RESPONSIBLE FOR INCONSISTENCIES THAT MAY OCCUR.

- B = BACK UP PLATES REQUIRED.
- C¹ = CUT TRIM/PLASTIC (STRUCTURE).
- C² = CUT STEEL.
- D = BELOW DECK ONLY.
- D¹ = LIFT PORTION OF DECK. (MAY REQUIRE STRUCTURAL REINFORCEMENT).
- D² = CUT STEEL WHEN TOP MOUNTED. DO NOT IF BELOW DECK.
- D³ = NARROW SURFACE, BELOW DECK ONLY.
- F¹ = MINIMUM MODIFICATION FILE SHAFT HOLES OR DASH OPENING.
- F² = MODIFY DASH CAVITY AND/OR PANEL.
- K = INSTALLATION KIT, SPACER OR ADAPTOR REQUIRED.
- K¹ = KIT MODIFICATIONS REQUIRED.
- K² = EXTENSION KIT RECOMMENDED.
- K³ = WHEN EQUIPPED WITH FACTORY "ELECTRONIC" RADIO.
- K⁴ = FABRICATE PANEL/BRACKETS.

- K^S = WHEN EQUIPPED WITH STANDARD TWO SHAFT RADIO/TAPE PLAYER. FABRICATE KIT WHEN EQUIPPED WITH FLAT FACE ELECTRONIC RADIO/TAPE PLAYER.
- K^S = SCOSCHE KIT RECOMMENDED.
- N = NOT RECOMMENDED. EXTENSIVE MODIFICATION REQUIRED.
- P = PERFECT WITHOUT MODIFICATION.
- P¹ = MODIFY OR REMOVE POCKETS.
- P² = COIN POCKET LOCATION IN DASH (MAY REQUIRE TRIM KIT).
- P³ = PERFECT WHEN EQUIPPED WITH STANDARD TWO SHAFT RADIO, K WITHOUT.
- R = REAR LOAD ISOMOUNT.
- U = UNDERDASH.
- W¹ = WITH POWER WINDOWS ONLY.
- W² = WITHOUT POWER WINDOWS ONLY.

1995-UP PONTIAC SUNFIRE

SEDAN, COUPE



DASH



DOOR.

PRELIMINARY: DISCONNECT THE NEGATIVE BATTERY CABLE

ANTENNA: THE FACTORY ANTENNA IS LOCATED ON THE RIGHT REAR FENDER.

RADIO REMOVAL AND IN-DASH INSTALLATION:

NOTE: THE FACTORY RADIO PROVISION IS FOR M2000 STYLE GM CHASSIS RADIO. AN INSTALLATION KIT IS REQUIRED FOR ALL AFTERMARKET INSTALLATIONS. WE RECOMMEND THE USE OF A SCOSCHE GM1500 SERIES KIT.

1. OPEN GLOVE BOX THEN REMOVE (2) SCREWS ALONG THE RIGHT SIDE OF THE RADIO/HEATER TRIM BEZEL.
2. CAREFULLY PULL OUT ON THE RIGHT SIDE OF THE RADIO/HEATER TRIM BEZEL AND (2) ALIGNMENT PINS WILL RELEASE ON THE DRIVER'S STEERING COLUMN PANEL.
3. REMOVE RADIO/HEATER TRIM BEZEL.
4. EXTRACT (2) SCREWS HOLDING RADIO, UNPLUG AND REMOVE.

FRONT DOOR SPEAKER INSTALLATION:


NOTE: THE FACTORY PROVISION IS FOR A STANDARD 4 X 6" SPEAKER MOUNTED IN A FACTORY ADAPTOR.

1. EXTRACT (1) SCREW FROM THE BACK EDGE OF THE DOOR PANEL BEHIND THE MAP POCKET.
2. EXTRACT (3) FROM ALONG THE BOTTOM EDGE OF THE DOOR PANEL.
3. USING A PANEL REMOVAL TOOL, CAREFULLY POP OUT THE TRIM PIECE BEHIND THE DOOR OPENER, UNPLUG POWER LOCK CONNECTORS (IF APPLICABLE) AND REMOVE.
4. REMOVE ONE SCREW FROM TOP FRONT MIRROR PLATE WITH POWER MIRROR CONTROL KNOB. PLATE WILL MOVE OUT OF THE WAY; THIS PIECE DOES NOT NEED TO BE REMOVED.
5. REMOVED (2) 9/32" SCREWS FROM UNDERNEATH THE ARMREST.
6. USING A PANEL REMOVAL TOOL, CAREFULLY PRY OUT AROUND THE SIDES AND BOTTOM EDGE OF THE DOOR PANEL TO RELEASE THE PANEL FASTENERS.
7. LIFT UP AND AWAY FROM DOOR TO REMOVE PANEL.
8. EXTRACT (4) SCREWS HOLDING SPEAKER IN ADAPTOR, UNPLUG AND REMOVE SPEAKER.
9. IF NEEDED, EXTRACT (4) SCREWS HOLDING ADAPTOR AND REMOVE ADAPTOR.


REAR DECK SPEAKER INSTALLATION.

NOTE: THE FACTORY PROVISION IS FOR A STANDARD 6 X 9" SPEAKER IN AN ADAPTOR/SPACER.

1. FOLD REAR SEAT DOWN.
2. USING A PANEL REMOVAL TOOL POP OUT (4) FASTENERS ALONG THE FRONT EDGE OF THE REAR DECK.
3. GENTLY PRY INWARD ON THE REAR PILLAR INSIDE PLASTIC PANELS TO RELEASE (3) CLIPS, REMOVE PANELS.
4. REMOVE (1) PANEL CLIP HOLDING REAR PLASTIC BEHIND-SEAT PANELS.
5. SLIDE REAR DECK TOWARDS FRONT OF CAR TO REMOVE.
6. EXTRACT (4) SCREWS HOLDING THE SPEAKER TO THE ADAPTOR/SPACER, UNPLUG AND REMOVE SPEAKER.
7. IF NEEDED, SPEAKER ADAPTOR/SPACER WILL UNSNAP FROM THE FRONT EDGE AND REMOVE.

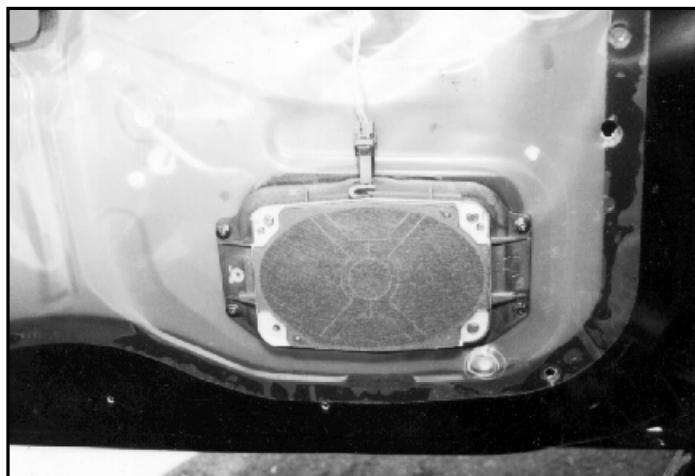

FRONT DOOR 4 X 6" IN FACTORY ADAPTOR.

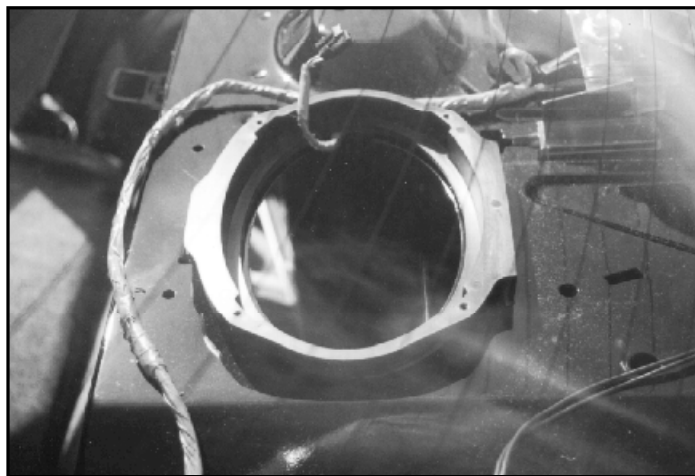

REAR DECK 6 X 9" ADAPTOR/SPACER.