# HARNESSES

Ì



1045

Scosche 1959 Chevrolet Apache show car



# HARNESSES



#### HARNESSES : Index

CAR STEREO HARNESSES
BMW 111
CHRYSLER 111-112
DAEWO0 112
FORD 112-116
GENERAL MOTORS 116-119
HONDA 119-122
HYUNDAI 122-123
JEEP 124
KIA 124
MAZDA 124-125
MITSUBISHI 125-126
NISSAN
SMART 127
SUBARU 128
SUZUKI 127
ТОУОТА
UNIVERSAL
VOLKSWAGEN
VOLVO 129
SPEAKER HARNESSES 109-110



SPEAKER HARNESSES




Install a set of aftermarket speakers using the vehicle's factory speaker connectors. Scosche Speaker Harnesses come preconnected with fast-on connectors for all aftermarket speakers and a factory matched connector on the other end. No cutting or splicing needed. Quick and easy installation.

#### SHCR01B 1985-97 Chrysler SHFDOIB 1981-97 Ford FORD Aftermarket Speaker to OEM Aftermarket Speaker to OEM Ford. Chrysler. See application guide for See application guide for specific vehicle list. specific vehicle list. SHFD02B 1981-up Chrysler SHCR02B 1986-up Ford Aftermarket Speaker to OEM Aftermarket Speaker to OEM Ford. Chrysler. See application guide for specific vehicle list. See application guide for specific vehicle list. SHFD03B SHGROBB 1991-up Chrysler **1999-up Ford Truck** Aftermarket Speaker to OEM Aftermarket Speaker to OEM Ford. Chrysler. See application guide for specific vehicle list. See application guide for specific vehicle list. :. SHCR04B SHGM01B 1973-96 GM 1987-up Chrysler GENERAL Aftermarket Speaker to Aftermarket Speaker to OEM OEM GM. Chrvsler. See application guide for specific vehicle list. See application quide for specific vehicle list. 3 3 9 9 1 0 0 4 8 6

🂋 SCOSCHE

CHRYSLER

109

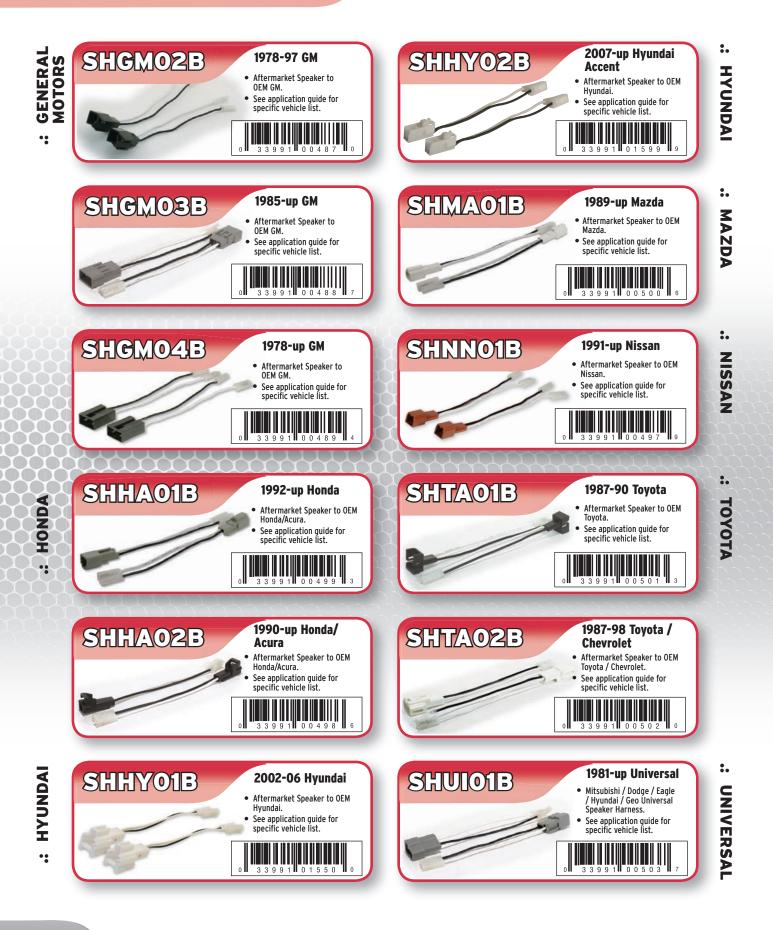

FAX ORDERS: 800.350.0687





#### The following are EIA standards for aftermarket automotive harnesses:

- 12 Volt to Battery = Yellow 12 Volt to Ignition = Red
- Ground = Black Speaker (Right Front) = Gray (+), Gray with Black Stripe (-)
- Speaker (Left Front) = White (+), White with Black Stripe (-)
  Speaker (Right Rear) = Violet (+), Violet with Black Stripe (-)
  Speaker (Left Rear) = Green (+), Green with Black Stripe (-)

Black Stripe (-)

- Antenna Out = Dark Blue
- Amp Remote (Turn on) = Dark Blue with White Stripe Illumination / Dimmer = Orange 10.

Red = Right White = Left RCA / Molded:









💋 SCOSCHE









🂋 SCOSCHE







💋 SCOSCHE







🂋 SCOSCHE





:.

HYUNDAI



🂋 SCOSCHE





:.

HYUNDAI



🂋 SCOSCHE

SALES: 800.363.4490 x1

:.

UNIVERSAL



.: MAZDA



🂋 5С05СНЕ

MITSUBISHI

••



.: NISSAN

SUZUKI

••



💋 SCOSCHE

\*•

SMART

:.

SUZUKI





SUBARU

•:

TECH SUPPORT: 800.621.3695 x3

:.

ΤΟΥΟΤΑ

.: ТОУОТА



💋 SCOSCHE



FAX ORDERS: 800.350.0687