


## MOUNTING THE RADIO

### IN-DASH DIN PULLOUT, DETACHABLE FACEPLATE, (DIN-E) RADIOS

The kit panel comes DIN ready. Follow the instructions supplied with the radio, secure the mounting kit. Install the assembly in the dash and use the rear support strap supplied with the radio to support the rear of the radio.

#### CAUTION:

REAR SUPPORTING THE RADIO  
ADDS TO THE INSTALLATION'S  
STRUCTURAL INTEGRITY.

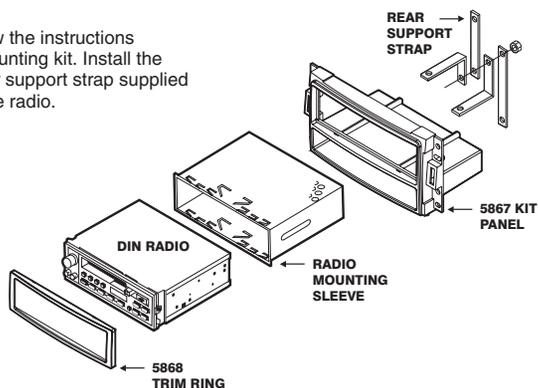


### DIN-ISO MOUNT:

#### (DIN-E Radio with Side Mounting Holes)

1. Snap the DIN-ISO side mounting brackets to the back of the mounting panel (1 left and 1 right). Use supplied hardware to bolt them to the back of the kit panel.
2. Snap the DIN-ISO trim ring into the radio opening.
3. Load the radio from the REAR of the mounting panel until the nose piece of the radio comes through the front of the kit.
4. Use the 5MM screws to secure the radio from the sides.

#### CAUTION:

REAR SUPPORTING THE RADIO  
ADDS TO THE INSTALLATION'S  
STRUCTURAL INTEGRITY.

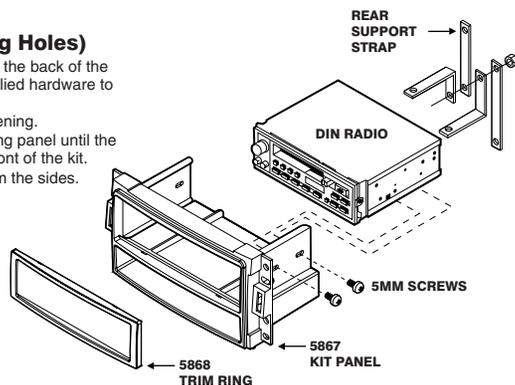

### 2005-UP Buick Terraza 2005-UP Chevrolet Uplander 2005-UP Pontiac Montana SV6 2005-UP Saturn Relay

#### RADIO REMOVAL

1. Using a panel removal tool, remove the trim around the radio and climate control.
2. Extract (8) Phillips head screws securing A/C controls and radio. Lift away, disconnect, and remove.

### 2005-UP Chevrolet Corvette

**NOTE:** Factory Radio has anti-theft lockout when unplugged. It can only be reset by a Chevrolet dealership.

#### RADIO REMOVAL

1. Open center console compartment, extract (4) Phillips screws securing compartment lid and remove.
2. Pop up leather parking brake boot and extract (2) hex screws from behind.
3. Use a panel removal tool to pop out the passenger airbag indicator panel (rear edge first), unplug and remove.
4. Extract (2) hex screws revealed in step 3.
5. Carefully pop out entire radio/climate control bezel, unplug all connections and remove.
6. Extract (6) hex screws holding radio/climate assembly, unplug and remove.

# SCOSCHE®

# GM1594

## IN-DASH INSTALLATION KIT FOR 2005-UP SELECT GM VEHICLES

#### BUICK

2005-UP TERRAZA

#### CHEVROLET

2005-UP CORVETTE


2005-UP UPLANDER

#### PONTIAC

2005-UP MONTANA SV6

#### SATURN

2005-UP RELAY

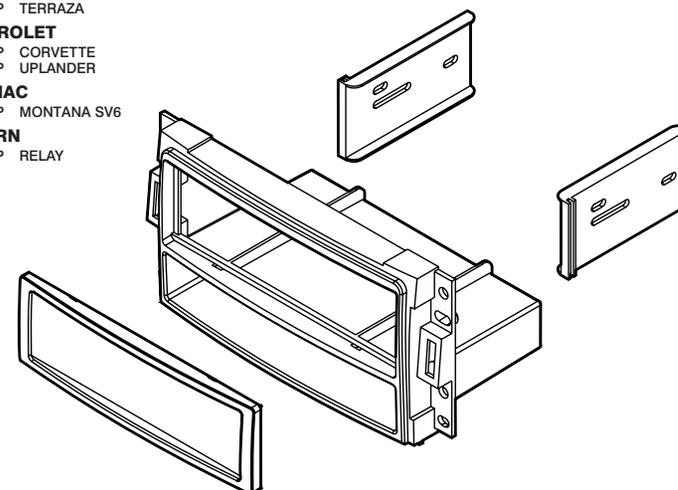

## WIRE CODES

For Factory Wiring Codes go to: [www.scosche-cars.com](http://www.scosche-cars.com)

## INTRODUCTION

This premium installation kit is for 2005-UP Select GM Vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

**CAUTION:** Disconnect your vehicle's negative battery terminal before the installation to help prevent electrical damage. We recommend the use of a volt/ohm meter over a test light to check wiring. A test light or grounded wire probe can cause damage to the vehicle's computer and/or diagnostic systems. Avoid all factory air bag wiring - air bags can accidentally deploy causing serious injury or death.

#### NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

#### LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (#GM1594). Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile during the installation of components while using this booklet.

If you have any further questions, call:  
©2005 SCOSCHE INDUSTRIES, INC.

TECH HELP 1-800-621-3695, ext. 3  
SI 7/05 - GM1594 (3000003)