


IN-DASH INSTALLATION KIT FOR 2006-UP CADILLAC DTS

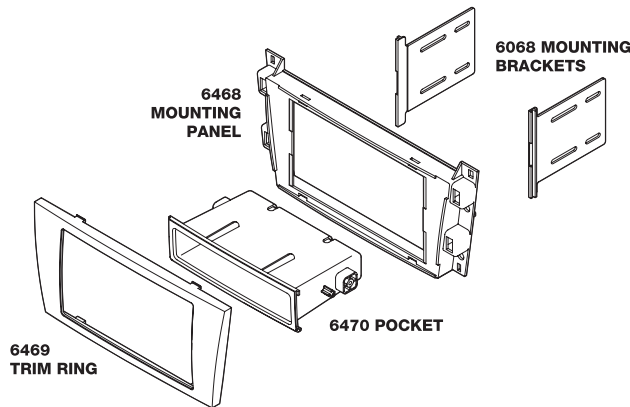

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2006-up Cadillac DTS vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION:

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.



IMPORTANT!

*Do Not Return Product
to the Retailer!*

IF YOU NEED ASSISTANCE OR REPLACEMENT PARTS

Call us FIRST at . . .

1-800-621-3695 ext 3

Toll Free, No-Charge tech support

- FRIENDLY CUSTOMER SERVICE TECHNICIANS
- YOU WON'T BE ON HOLD LONGER THAN 5 MINUTES

OUR HOURS ARE:

*Monday - Friday 8:00 a.m. to 5:30 p.m. (PST)
Saturday 8:00 a.m. to 2:00 p.m. (PST)*

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com

CAR STEREO CONNECTORS


PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

GM21SR

2007-up select General Motors with OnStar replacement interface

CRAB


2002-up Chrysler/Jeep antenna adapter

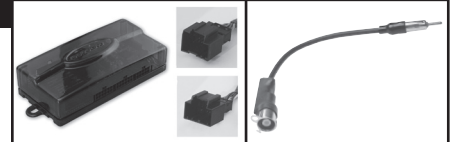

MOUNTING THE STEREO


ISO DIN MOUNT

1. Snap the 6068 left and right brackets to the 6468 kit panel.
2. Snap 6469 trim ring onto 6468 kit panel.
3. Align the 6470 pocket to the lower edge of the trim ring. Secure the pocket to the mounting brackets using the screws supplied in the kit.
4. Mount stereo to brackets with the stereo's supplied screws.

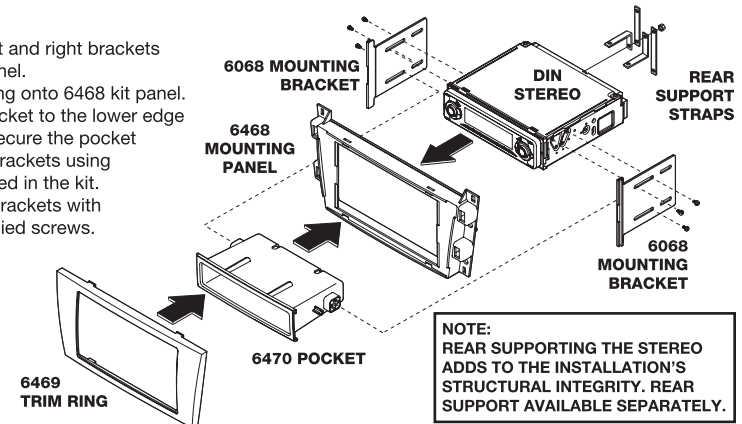

DOUBLE DIN MOUNT

1. Snap the 6068 left and right brackets to the 6468 kit panel.
2. Snap 6469 trim ring onto 6468 mounting panel.
3. Align, position and bolt the aftermarket double DIN-ISO head unit to the 6068 mounting brackets. Use the hardware supplied with the aftermarket double DIN-ISO head unit to secure the mounting brackets to the aftermarket stereo.

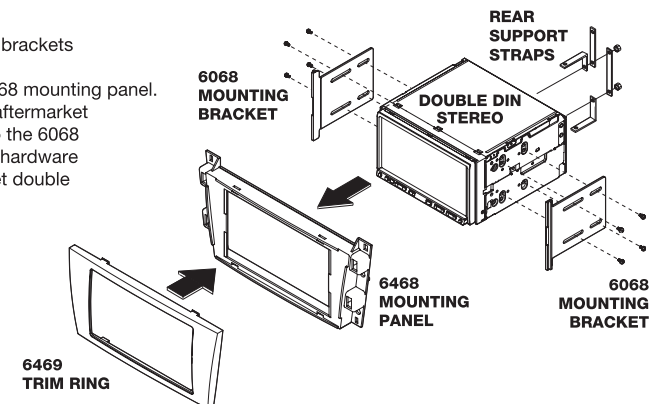

STEREO REMOVAL

2006-UP CADILLAC DTS

1. Using a panel removal tool unsnap the stereo trim bezel and remove.
2. Unscrew and remove vents.
3. Unscrew and remove air conditioning controls.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this GM1523B kit for 2006-up Cadillac DTS vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.