

**2004-UP Chrysler 300
2004-UP Dodge Magnum**

1. Using a panel removal tool, carefully pry out ashtray and ashtray housing.
2. Starting from the bottom, carefully pry out the radio/climate control dash bezel. Disconnect and remove.
3. Remove four (4) Phillips head screws from radio bracket. Disconnect and remove.

2006-UP Dodge Charger

Radio Removal:

1. Using panel removal tool, unsnap the dash bezel surrounding the factory radio, lift away, disconnect and remove.
2. Extract (4) four Phillips head screws securing radio, lift away, disconnect and remove.

2005-UP Dodge Dakota

Radio Removal:

1. Extract two (2) Phillips head screws at bottom of center dash bezel.
2. Using panel removal tool, carefully unsnap center dash bezel from top to bottom, lift away, disconnect and remove.
3. Extract (4) four Phillips head screws securing radio, lift away, disconnect and remove.

2004-UP Dodge Durango

Radio Removal:

1. Using a Phillips screw driver, remove two (2) screws in an upward angle at bottom edge of radio and A/C control bezel.
2. Using panel removal tool, pop out radio dash bezel and remove.
3. Using a Phillips screw driver, remove four (4) screws from radio, disconnect and remove.

2006-UP Dodge Ram

Radio Removal:

1. Unsnap the top portion of center console using a panel removal tool.
2. Extract (3) Philips head screws securing the rest of the center console. Lift away and remove.
3. Extract (2) Philips head screws securing a trim panel that meets the carpet and the dash together.
4. Once trim panel is removed, unsnap the panel from behind that would originally hug the center console.
5. After the panel is removed, access and extract (2) Philips head screws screwed in a vertical direction securing the dash bezel surrounding the radio.
6. Using a panel removal tool, unsnap the dash bezel surrounding the radio. Lift away, disconnect and remove

2005-UP Jeep Grand Cherokee

Radio Removal:

1. Using panel removal tool, carefully unsnap radio trim bezel, lift away and remove.
2. Extract four (4) Phillips head screws securing the radio, lift away, disconnect and remove.

**IN-DASH INSTALLATION KIT FOR
SELECT 2004-UP CHRYSLER, DODGE & JEEP
VEHICLES W/O NAVIGATION**

CHRYSLER

2004-UP 300

DODGE

2006-UP CHARGER

2005-UP DAKOTA


2004-UP DURANGO

2004-UP MAGNUM

2006-UP RAM

JEEP

2005-UP GRAND CHEROKEE

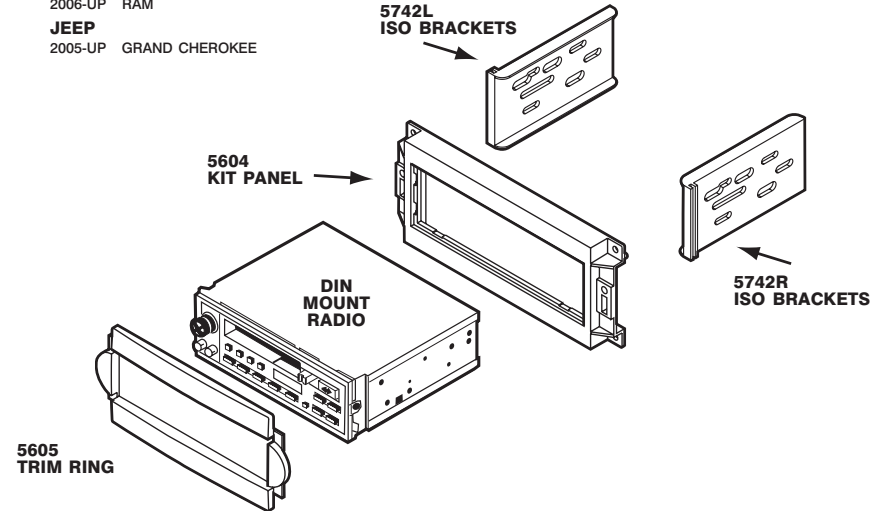

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche CR1286 Kit. This kit was manufactured with the highest of quality standards.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

WIRE CODES

For Factory Wiring Codes go to: www.scosche-cars.com

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call:

©2006 SCOSCHE INDUSTRIES, INC.

CR1286B 3/06 (3000431)