

VEHICLE DISASSEMBLY

2007-UP CHRYSLER SEBRING

RADIO REMOVAL:

1. Using a panel removal tool, unsnap panel surrounding radio including A/C vents and clock. Unplug and remove panel.
2. Extract (4) 7mm screws from stereo, disconnect and remove.

2007-UP DODGE AVENGER

RADIO REMOVAL:

1. Unclip Bezel surrounding shifter knob.
2. Using a panel removal tool, remove bottom bezel beneath A/C control.
3. Using a panel removal tool, unclip bezel surrounding radio.
4. Extract (4) T20 screws from the radio, disconnect and remove.

2007-UP DODGE NITRO

RADIO REMOVAL:

1. Using a panel removal tool, unsnap panel surrounding radio including A/C Control and vents. Unplug and remove panel.
2. Extract (4) 7mm screws from stereo, disconnect and remove.

2007-UP JEEP WRANGLER

RADIO REMOVAL:

1. Using a panel removal tool, unsnap panel below hazard switch.
2. Extract (2) 7mm screws
3. Using a panel removal tool unsnap black 10x10 plastic panel on top of dash. Unsnap rear of panel (closest to windshield) then slide panel back and up.
4. Extract (2) 7mm screws
5. Using a panel removal tool unsnap trim panel around stereo.
6. Disconnect A/C cables, unplug remaining plugs, lift away.
7. Remove (4) 7mm screws from Stereo, disconnect and remove.

SCOSCHE

CR1288B

IN-DASH INSTALLATION KIT FOR SELECT 2007-UP CHRYSLER, DODGE, & JEEP VEHICLES W/O NAVIGATION

CHRYSLER
2007-UP SEBRING

DODGE
2007-UP AVENGER
2007-UP NITRO


JEEP
2007-UP WRANGLER

5604
KIT PANEL

5742L
ISO BRACKET

5742R
ISO BRACKET

6297
TRIM RING

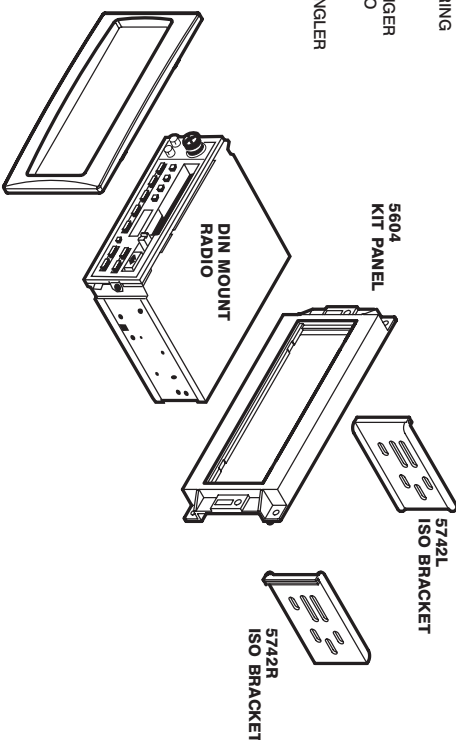

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche CR1288B Kit. This Kit was manufactured with the highest of quality standards.

CAUTION: DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

FACTORY WIRING CODES
For Factory Wiring Codes go to: www.scosche-cars.com

CAR STEREO CONNECTORS	LIABILITY DISCLAIMER
PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.	
N/A	N/A

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call:
©2007 SCOSCHE INDUSTRIES, INC.

TECH HELP 1-800-621-3695x3
CR1288B 4/07 (3000003)