


IN- DASH INSTALLATION FOR 2016-UP SUBARU BRZ ISO DOUBLE DIN & SINGLE DIN W/ POCKET KIT

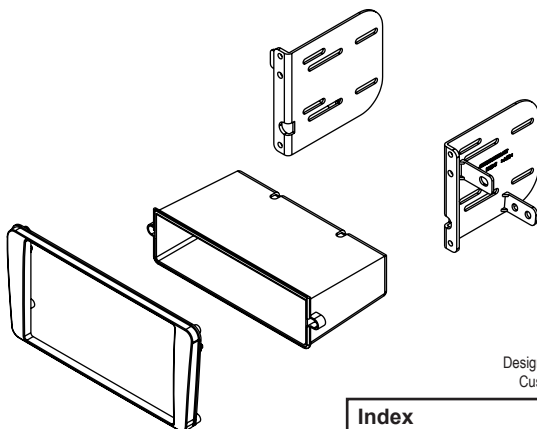

Designed & Engineered IN U.S.A.
Custom Manufactured in China

Tools Required:

- PRT (Panel Removal Tool)
- Screwdriver

Index

- Overview (Cover)
- Radio Disassembly (Page 2)
- Single DIN Radio Assembly (Page 3)
- Double DIN Radio Assembly (Page 4)

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2016-Up Subaru BRZ vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION: *DISCONNECT YOUR VEHICLE NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.*

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

**STOP**

IMPORTANT!

DO NOT RETURN PRODUCT TO THE RETAILER

IF YOU NEED ASSISTANCE OR REPLACEMENT PARTS CALL US TOLL FREE: 1-800-621-3695 X3
HOURS: MON-FRI 8AM-5:30PM (PST) SATURDAY 8AM-2PM (PST)

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile disassembly, wire harness/codes and information pertaining to the installation of this kit. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at:

1-800-621-3695x3

© 2016 SCOSCHE INDUSTRIES, INC

SU2032B 03/17

Step 1 *Disassembly*

2017 Subaru BRZ
OEM Dash Overview



Step 2 *Disassembly*

Using a panel removal tool carefully remove the passenger panel located on the front dash. (located just right of the radio, see image)



Step 3 *Disassembly*

Use a panel removal tool to pry around the perimeter of the radio face panel to help unsnap from the dashboard.



Step 4 *Disassembly*


Using a 10mm socket remove the four bolts used to secure the radio to the dash. Two located on the LEFT and two located on RIGHT, retain bolts for reinstall.

Unplug and remove the radio from location then proceed to either single din installation on page 3 or double din installation steps on page 4.





Step 5 *Single Din Assembly*

Mount the provided pocket to the back of the SU2032B face panel.

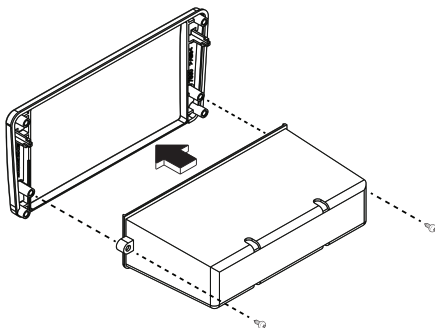


Step 6 *Single Din Assembly*

Mount the provided pocket to the back of the SU2032B face pane.

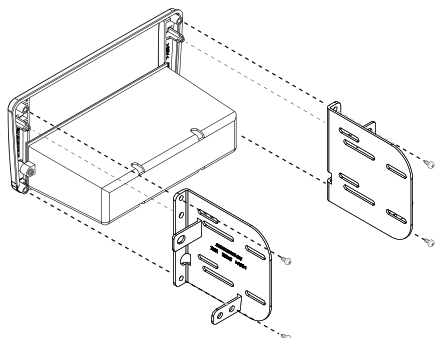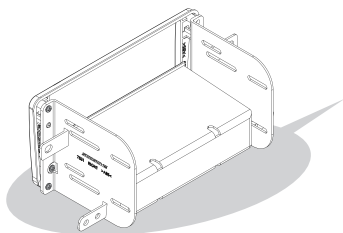

Step 7 *Single Din Assembly*

Slide and adjust the aftermarket radio into the bracket assembly, then secure once proper fitment is determined.

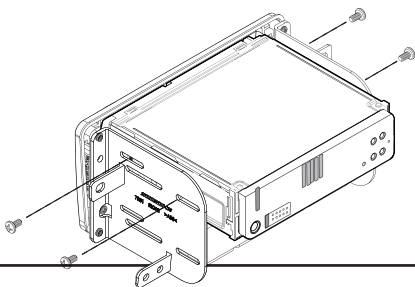


Step 8 *Single Din Assembly*

Reassemble & Connect



everything with the new aftermarket panel in reverse order.

In order to complete the installation process for your new kit, you must first reassemble everything in reverse order of disassembly. Connect all wires and place the assembly kit/radio unit back into the radio dash cavity.

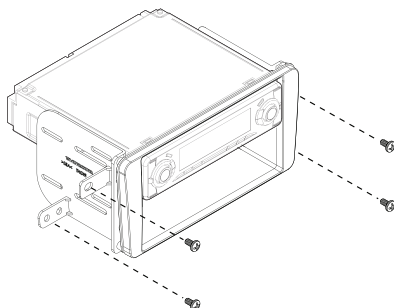


Step 9 *Double Din Assembly*

Mount and screw into place the provided brackets (LEFT & Right) to back of the Scosche SU2032B face panel (See illustration).

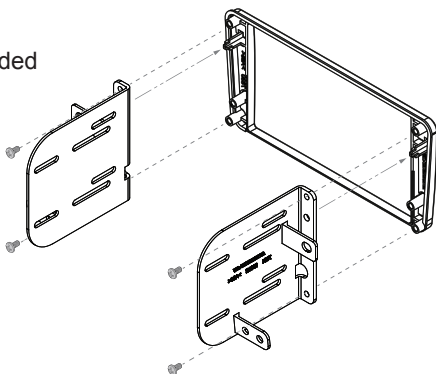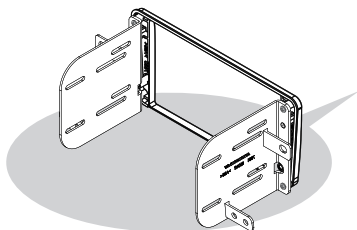


Step 10 *Double Din Assembly*

Slide and secure the double DIN aftermarket radio unit into place then proceed to the next step (See illustration).

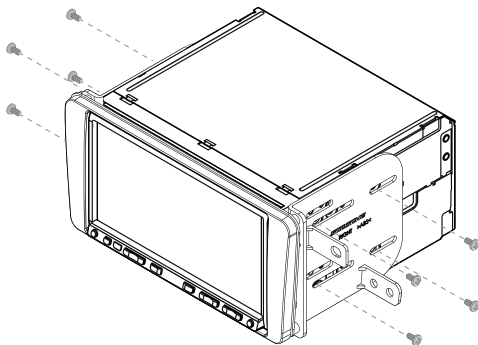

Step 11 *Double Din Assembly*

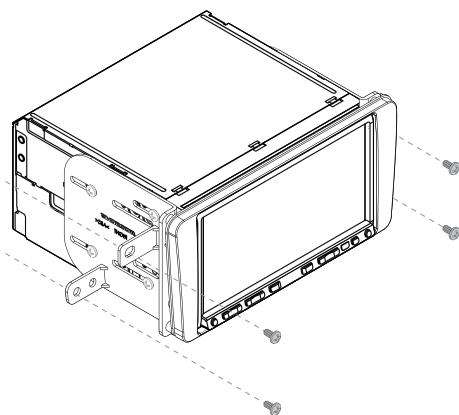

Reassemble & Connect

everything with the new aftermarket panel in reverse order.

In order to complete the installation process for your new kit, you must first reassemble everything in reverse order of disassembly. Connect all wires and place the assembly kit/radio unit back into the radio dash cavity.