

IN-DASH INSTALLATION KIT FOR SELECT 1995-2014 FORD/LINCOLN/ MAZDA & MERCURY VEHICLES

STOP! BEFORE BEGINNING...
REFER TO QUICK-START GUIDE ON PAGES 2-3

VEHICLE APPLICATION INDEX

FORD	PAGE	FORD (cont'd)	PAGE
1997-04 CLUB WAGON	4	1995-12 RANGER	5
1995-08 CROWN VICTORIA	4	2008-09 TAURUS	6
1997-08 ECONOLINE VAN	4	2008-09 TAURUS X	6
2001-07 ESCAPE	4	1999-03 WINDSTAR	8
2000-06 EXCURSION	4		
1997-98 EXPEDITION	6	LINCOLN	
1999-02 EXPEDITION	5	2003-06 AVIATOR.....	8
2003-06 EXPEDITION	5	1995-97 CONTINENTAL	4
2007-14 EXPEDITION	5	1998-02 NAVIGATOR	5
1995-05 EXPLORER SPORT/ SPORT TRAC	4	2003-06 NAVIGATOR	8
1995-01 EXPLORER 4 DR.	4	2007-14 NAVIGATOR W/NAV.....	8
2002-05 EXPLORER 4 DR.	5	1995-98 MARK VIII	4
2006-10 EXPLORER	4	2006-08 MARK LT	6
2004-08 F-150 PICKUP	6	1995-99 TOWN CAR	4
2005-07 FIVE HUNDRED	6		
2005-07 FOCUS	7	MAZDA	
2005-07 FREESTAR	7	1995-08 **B-SERIES PICKUP	4
2005-07 FREESTYLE	6		
1997-98 F-SERIES PICKUP	6	MERCURY	
1999-03 F-SERIES PICKUP	5	2001-02 COUGAR	8
2004 F-SERIES HERITAGE	5	1995-08 GRAND MARQUIS	4
1999-04 F-SERIES SUPER-DUTY	4	2005-07 MARINER	4
2005-07 F-SERIES SUPER-DUTY	7	2006-09 MILAN	4
2008-12 F-SERIES SUPER-DUTY	7	2005-07 MONTEGO	6
2006-09 FUSION	4	2005-07 MONTEREY	7
2001-04 MUSTANG	6	71996-01 MOUNTAINEER	4
2005-09 MUSTANG	7	2002-05 MOUNTAINEER	5
		2006-10 MOUNTAINEER	4
		2008 SABLE	6

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS (SOLD SEPARATELY).

FDK106

1988-04 Select Ford,
Lincoln, Mercury,
Mazda Premium
Sound Connector




FD213

1986-13 Ford,
Lincoln, Mercury
Vehicles
Non-Premium/
JBL Sound



DT1

Ford DIN
Removal
Tool

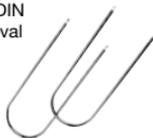

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (FD2080) in 1995-2014 select Ford/Lincoln/Mazda/Mercury vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x1**

QUICK-START GUIDE

INTRODUCTION


This premium installation kit is for 1995-2014 Ford/Lincoln/Mazda and Mercury Vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT WHEN CHECKING WIRING. A TEST LIGHT (GROUNDED WIRE PROBE), IF USED IMPROPERLY, CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC WIRING SYSTEM. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY, CAUSING SERIOUS INJURY OR DEATH.

Notes:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

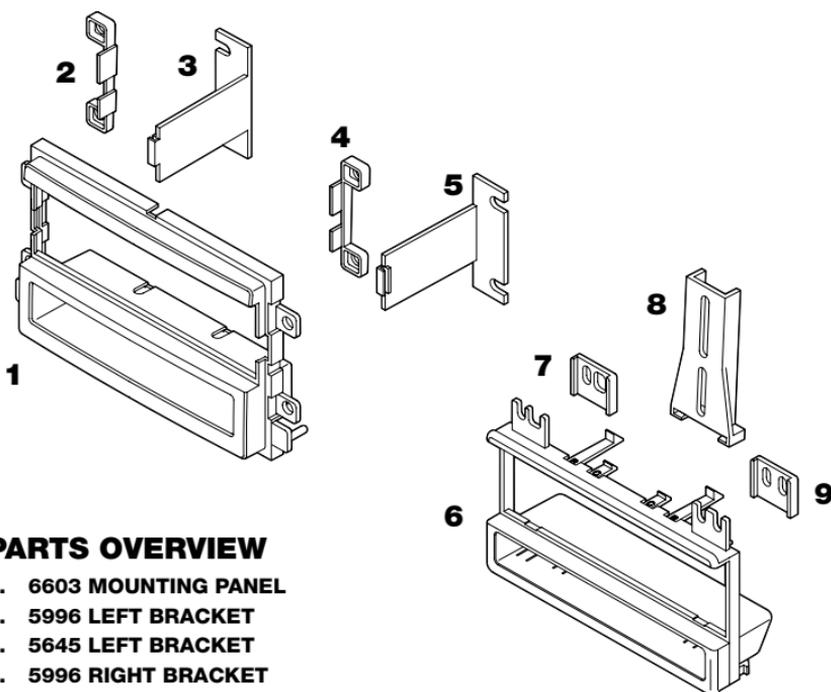

PARTS OVERVIEW

1. 6603 MOUNTING PANEL
2. 5996 LEFT BRACKET
3. 5645 LEFT BRACKET
4. 5996 RIGHT BRACKET
5. 5645 RIGHT BRACKET
6. 6604 MOUNTING PANEL
7. 6617 LEFT SPACER
8. 1525 REAR SUPPORT BRACKET
9. 6618 RIGHT BRACKET

STEP 1 - PICK YOUR VEHICLE & REMOVE FACTORY STEREO

Use the Vehicle Application Index on the front cover to locate your vehicle and its specific factory stereo removal instructions (pages 4-8), disassemble the dash and remove factory stereo. If your vehicle is not listed on front cover, then this is NOT the correct kit for your vehicle.

QUICK-START GUIDE

STEP 2 - STEREO ASSEMBLY


FLATFACE DIN/DETACHABLE FACEPLATE/PULLOUT (DIN-E) RADIOS

Slide the mounting sleeve (metal shroud) into the panel's radio opening and bend all available mounting tabs outward (see inset). Slide the radio into the mounting sleeve once it has been fastened to the kit panel until the radio locks into place. **NOTE:** The mounting sleeve must be removed from the radio first! Your radio may be snapped into its sleeve. Slide the mounting sleeve (metal shroud) off the radio towards the back.

REMOVE SLEEVE FROM THE STEREO

1. Locate the locking mechanism on your DIN stereo sleeve (typically) on the side.
2. Slip mounting sleeve towards rear of stereo and remove.

To determine the proper mounting panel for your vehicle see pages 4-8

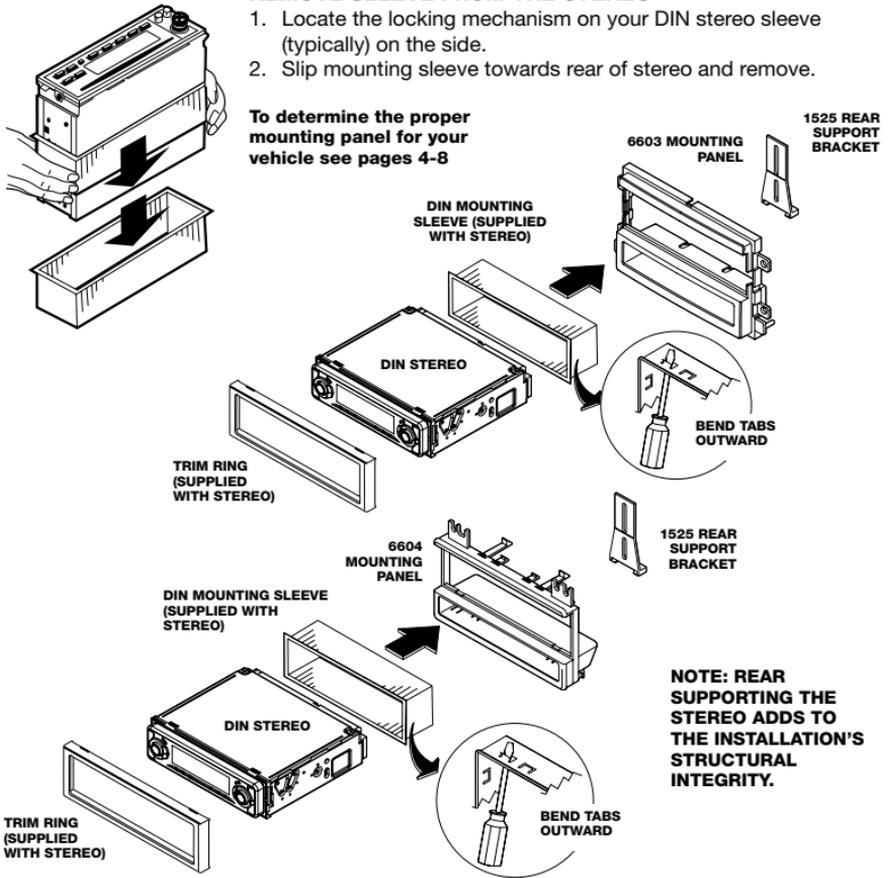

SHAFT MOUNT INSTALLATION NOTE:

SNAP SHAFT MOUNTING TABS NOT INCLUDED. IF REQUIRED FOR YOUR STEREO INSTALLATION, CALL 800-821-36945 x1 FOR IMMEDIATE SHIPMENT.


STEP 3 - STEREO CONNECTION*

USE THE APPROPRIATE SCOSCHE WIRING CONNECTOR (*not included - see page 1)

Wire up your new aftermarket stereo to the Scosche wiring connector and install the Scosche kit and new stereo assembly in your vehicle. Follow the dash disassembly for your specific vehicle in reverse order to reassemble your dash.

VEHICLE FACTORY STEREO REMOVAL/ FD2080 KIT CONFIGURATION

- 1997-04 FORD CLUB WAGON
- 1995-08 FORD CROWN VICTORIA
- 1997-07 FORD ECONOLINE VAN
- 2001-07 FORD ESCAPE
- 2000-06 FORD EXCURSION
- 1995-05 FORD EXPLORER
SPORT/SPORT TRAC
- 1995-12 FORD RANGER
- 1995-01 FORD EXPLORER 4 DR.
- 1999-04 FORD SUPERDUTY PICKUP
- 1995-97 LINCOLN CONTINENTAL
- 1995-97 LINCOLN MARK VIII
- 1995-97 LINCOLN TOWN CAR
- 1995-08 MAZDA B-SERIES PICKUP
- 1995-08 MERCURY GRAND MARQUIS
- 1996-01 MERCURY MOUNTAINEER
- 2005-07 MERCURY MARINER

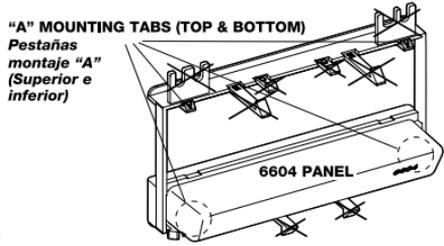

FD2080 Kit Configuration
USE "A" MOUNTING TABS ON 6604
MOUNTING PANEL. CUT OFF THE
REMAINING TABS AND DISCARD.


RADIO REMOVAL:

Insert DIN removal tools. Spread the tools apart to release factory stereo, slip it out of the dash, unplug & remove radio.

- 2006-09 FORD FUSION
- 2006-09 MERCURY MILAN

RADIO REMOVAL:

1. Using a panel removal tool, unsnap radio trim panel, unplug harness and remove.
2. Remove (4) 7mm screws securing the radio.

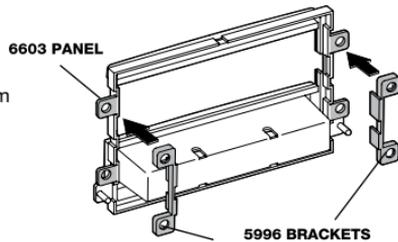


FD2080 Kit Configuration
USE 5996 BRACKETS WITH MOUNTING TABS
ON 6603 MOUNTING PANEL FOR INSTALLATION.

- 2006-10 FORD EXPLORER
- 2006-10 MERCURY MOUNTAINEER

RADIO REMOVAL:

1. Lift center console lid and extract (2) 7mm hex screws.
2. Using a panel removal tool, lift up to
3. Using a panel removal tool, unsnap radio dashbezel surrounding radio.

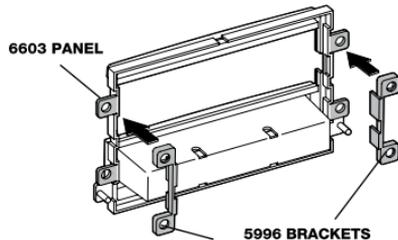


FD2080 Kit Configuration
USE 5996 BRACKETS WITH MOUNTING TABS
ON 6603 MOUNTING PANEL FOR INSTALLATION.

VEHICLE FACTORY STEREO REMOVAL/ FD2080 KIT CONFIGURATION

2007-14 FORD EXPEDITION

RADIO REMOVAL:

1. Using a panel removal tool, unsnap small trim platelocated below radio trim panel.
2. Using a panel removal tool, unsnap radio trim panel,unplug harness and remove.
3. Remove (4) 7mm screws securing the radio.

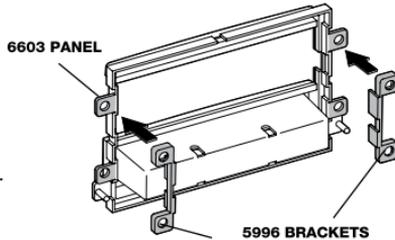


FD2080 Kit Configuration

USE 5996 BRACKETS WITH MOUNTING TABS ON 6603 MOUNTING PANEL FOR INSTALLATION.

2003-06 FORD EXPEDITION

RADIO REMOVAL:

1. Extract (2) 9/32" screws from above instrument cluster.
2. Carefully pry out dash bezel after putting truck into low gear. Disconnect and remove.

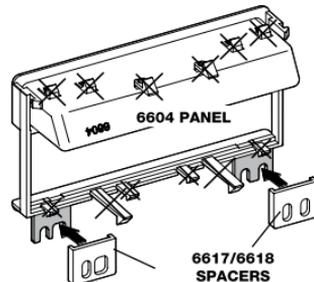

FD2080 Kit Configuration

USE 6617/6618 SPACERS WITH SHADED MOUNTING TABS ON 6604 MOUNTING PANEL FOR INSTALLATION. CUT OFF THE REMAINING TABS AND DISCARD.

1999-02 FORD EXPEDITION

1999-03 FORD F-SERIES PICKUP

2004 FORD HERITAGE F-150

1998-02 LINCOLN NAVIGATOR

RADIO REMOVAL:


1. Carefully pry out on stereo/dash bezel and unsnap to remove.

CAUTION: PASSENGER AIRBAG SWITCH DOES NOT UNPLUG ON PICKUP.

2. Insert DIN removal tools. Spread the tools apart to release factory stereo, slip it out of the dash and remove stereo.

"B" MOUNTING TABS (TOP & BOTTOM)

Pestañas montaje "B" (Superior e inferior)

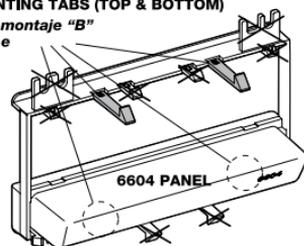

FD2080 Kit Configuration


USE "B" MOUNTING TABS (TOP & BOTTOM) ON 6604 MOUNTING PANEL. CUT OFF THE REMAINING TABS AND DISCARD.

2002-05 FORD EXPLORER 4 DOOR

2002-05 MERCURY MOUNTAINEER

RADIO REMOVAL:

1. Use panel removal tool to pry out radio trim bevel and disconnect.
2. Extract (2) two 9/32" screws, located below the radio, disconnect and remove.

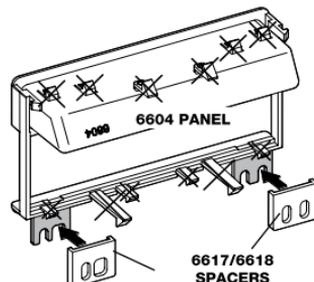

FD2080 Kit Configuration

USE 6617/6618 SPACERS WITH SHADED MOUNTING TABS ON 6604 MOUNTING PANEL FOR INSTALLATION. CUT OFF THE REMAINING TABS AND DISCARD.

VEHICLE FACTORY STEREO REMOVAL/ FD2080 KIT CONFIGURATION


1997-98 FORD EXPEDITION
1997-98 FORD F-SERIES PICKUP

RADIO REMOVAL:

1. Carefully pry out on stereo/dash bezel and unsnap to remove.

CAUTION: PASSENGER AIRBAG SWITCH DOES NOT UNPLUG ON PICKUP.

2. Insert DIN removal tools. Spread the tools apart to release factory stereo, slip it out of the dash and remove stereo.

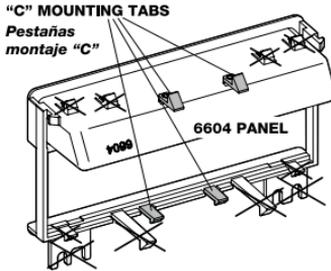


FD2080 Kit Configuration
USE "C" MOUNTING TABS (TOP & BOTTOM)
ON 6604 MOUNTING PANEL. CUT OFF THE
REMAINING TABS AND DISCARD.

2001-04 FORD MUSTANG

RADIO REMOVAL:

1. Use panel removal tool to pry out gear shift bezel.
2. Use panel removal tool to pry out radio trim bevel.
3. Extract (2) two 9/32" screws, located below the radio, disconnect and remove.

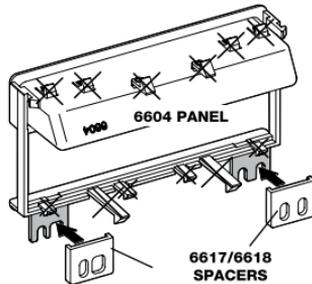


FD2080 Kit Configuration
USE 6617/6618 SPACERS WITH INDICATED MOUNTING
TABS ON 6604 MOUNTING PANEL FOR INSTALLATION.
CUT OFF THE REMAINING TABS AND DISCARD.

2004-08 FORD F-150 PICKUP
2005-07 FORD FREESTYLE
2008-09 FORD TAURUS X
2006-08 LINCOLN MARK LT PICKUP

RADIO REMOVAL:

1. Using panel removal tool, pry loose panel from around radio, vent, and shifter. Unplug and remove.
2. Remove (4) Phillips head screws from radio brackets. Unplug and remove.

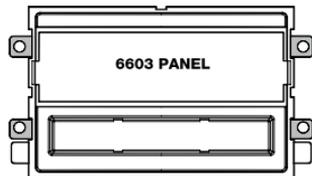


FD2080 Kit Configuration
USE 6603 MOUNTING PANEL
FOR INSTALLATION.

2005-07 FORD FIVE HUNDRED
2008-09 FORD TAURUS
2005-07 MERCURY MONTEGO
2008 MERCURY SABLE

RADIO REMOVAL:

1. Unsnap shifter trim bezel, lift away and remove.
2. Unsnap center console bezel, lift away and remove.
3. Extract (2) 7mm hex bolts securing bottom edge of dash panel. Unsnap dash panel, lift away, disconnect & remove.
4. Extract (4) 7mm hex bolts securing radio, lift away, disconnect and remove brackets. Unplug and remove.

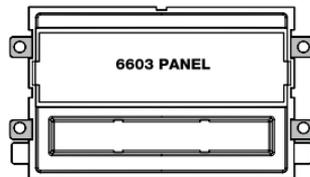

FD2080 Kit Configuration
USE 6603 MOUNTING PANEL
FOR INSTALLATION.

VEHICLE FACTORY STEREO REMOVAL/ FD2080 KIT CONFIGURATION


2005-07 FORD FREESTAR

2005-07 FORD FOCUS

2004-07 MERCURY MONTEREY

RADIO REMOVAL:

1. Using panel removal tool, pop out radio bezel. Disconnect and remove.
2. Extract (4) 7mm hex bolts securing radio, lift away, disconnect and remove brackets. Unplug and remove.

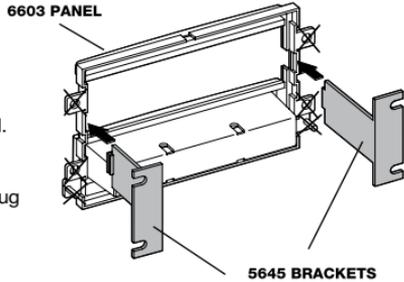


FD2080 Kit Configuration
USE 5645 BRACKETS WITH MOUNTING TABS ON 6603 MOUNTING PANEL FOR INSTALLATION. CUT OFF THE REMAINING TABS & DISCARD.

2005-08 FORD MUSTANG

RADIO REMOVAL:

1. Open center console, remove two (2) Phillips head screws from back of console cover. Lift up and remove. (Console cover is held in place by two screws in back and press clips on each side and front.)
2. Remove panel from along side of center dash by pulling from bottom to top. Panels are held in place via press clips.
3. To remove radio trim bezel, extract (6) 9/32 screws (three on each side) from panel. Unplug heat and AC control harnesses, remove panel. Extract four 9/32 screws from radio mounting, unplug and remove.

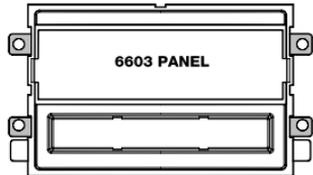


FD2080 Kit Configuration
USE 6603 MOUNTING PANEL FOR INSTALLATION.

2008-12 FORD SUPERDUTY PICKUP

RADIO REMOVAL:

1. Use a panel removal tool to carefully unsnap smallaux-in and lighter panels, unplug and remove.
2. Extract (2) 7mm screws from behind panels removed in step 1.
3. Use a panel removal tool to carefully unsnap dash/radio bezel, unplug and remove.
4. Extract (4) 7mm screws holding radio, unplug and remove radio.

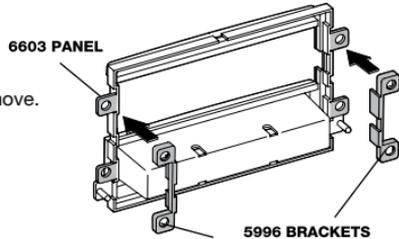


FD2080 Kit Configuration
USE 5996 BRACKETS WITH MOUNTING TABS ON 6603 MOUNTING PANEL FOR INSTALLATION.

2005-07 FORD SUPERDUTY PICKUP

RADIO REMOVAL:

1. Carefully unsnap dash/radio panel using panel removal tool, lift away, disconnect and remove.
2. Extract four (4) 8mm hex bolts securing radio, lift away, disconnect and remove.

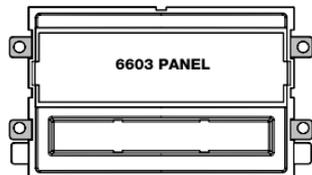

FD2080 Kit Configuration
USE 6603 MOUNTING PANEL FOR INSTALLATION.


VEHICLE FACTORY STEREO REMOVAL/ FD2080 KIT CONFIGURATION

1999-03 FORD WINDSTAR 2001-02 MERCURY COUGAR

RADIO REMOVAL:

1. Use Ford DIN removal tool to release clips on the sides of the factory stereo, lift away, disconnect and remove. Scosche DT-1 DIN Removal Tools available separately.

"A" MOUNTING TABS (TOP & BOTTOM)
Pestañas montaje "A" (Superior e inferior)

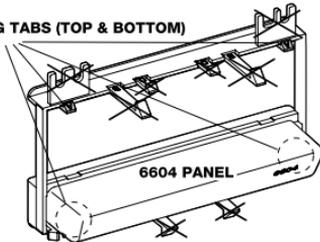


FD2080 Kit Configuration
USE "A" MOUNTING TABS ON 6604 MOUNTING PANEL.
CUT OFF THE REMAINING TABS AND DISCARD.

2003-05 LINCOLN AVIATOR

RADIO REMOVAL:

1. Use a panel removal tool to carefully unsnap and remove the center vent/grille panel above radio.
2. Extract (2) 7mm hex screws from below center panel.
3. Use a panel removal tool to carefully unsnap and remove radio trim bezel/with cover door (one piece).
4. Extract (2) 7mm hex screws from below stereo, unplug and remove stereo.

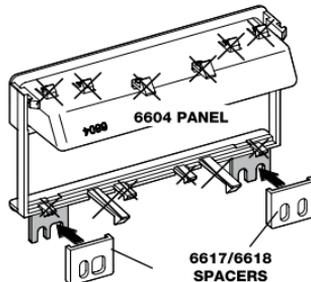


FD2080 Kit Configuration
USE 6617/6618 SPACERS WITH INDICATED MOUNTING TABS ON 6604 MOUNTING PANEL FOR INSTALLATION.
CUT OFF THE REMAINING TABS AND DISCARD.

2007-14 LINCOLN NAVIGATOR W/ NAVIGATION

RADIO REMOVAL:

1. Using a panel removal tool, unsnap shifter trim bezel around shifter.
2. Remove (2) 7mm screws at bottom of panel
3. Using a panel removal tool, unsnap radio trim panel unplug harness and remove
4. Remove (4) 7mm screws securing the radio.

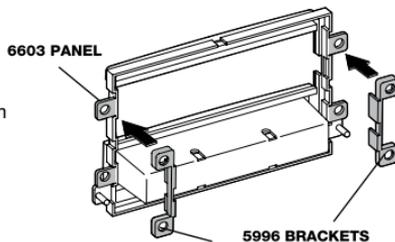


FD2080 Kit Configuration
USE 5996 BRACKETS WITH MOUNTING TABS ON 6603 MOUNTING PANEL FOR INSTALLATION.

2003-06 LINCOLN NAVIGATOR

RADIO REMOVAL:

1. Open the center console door and remove (1) push-pin type fastener from power window switch panel. Unsnap, unplug and remove panel.
2. Extract (2) 7mm hex screws from back of gear shift/cup holder panel, unsnap and lift panel out of the way.
3. Extract (2) 7mm hex screws from below ashtray.
4. Use a panel removal tool to carefully unsnap and remove the entire radio-A/C control center dash bezel, unplug and remove.
5. Extract (2) 7mm hex screws from below stereo, unplug and remove stereo.

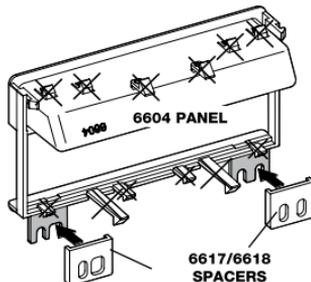

FD2080 Kit Configuration
USE 6617/6618 SPACERS WITH INDICATED MOUNTING TABS ON 6604 MOUNTING PANEL FOR INSTALLATION.
CUT OFF THE REMAINING TABS AND DISCARD.