

**1999-04 Chrysler 300M**  
**1998-01 Chrysler LHS**  
**1998-04 Dodge Intrepid**

**RADIO REMOVAL:**

1. Carefully pop up lower shifter console trim bezel and slide towards rear of car.
2. Carefully pop out radio/climate control panel, unplug connectors and remove.
3. Extract (4) screws holding radio in, unplug and remove radio.

**1998-04 Chrysler Concorde**

**RADIO REMOVAL:**

1. Carefully pop out radio/climate control bezel, unplug and remove.
2. Extract (4) screws holding radio in, unplug and remove radio.

**2001-05 Chrysler PT Cruiser**

**RADIO REMOVAL:**

1. Using a small pick tool, unsnap power window control. Extract (1) Phillips head screw from behind, lift away, disconnect and remove.
2. Using a panel removal tool, carefully remove dash bezel.
3. Extract (4) Phillips head screws securing radio, lift away, disconnect and remove.

**2001-05 Chrysler Sebring Convertible**

**2001-05 Chrysler Sebring Sedan**

**RADIO REMOVAL:**

1. Use panel removal tool to pry out radio dash bezel.
2. Disconnect and remove bezel.
3. Extract (4) Philips head screws from radio.
4. Pull radio away, disconnect and remove.

**2001-05 Chrysler Sebring Coupe**

**RADIO REMOVAL:**

1. Extract (2) Phillips head screws from bottom of radio bezel.
2. Using a panel removal tool, unsnap and remove the dash bezel.
3. Extract (4) Phillips head screws securing radio, lift away, disconnect and remove.

**2001-05 Chrysler Town and Country**

**2001 Plymouth Voyager**

**2001-05 Dodge Caravan**

**RADIO REMOVAL:**

1. Open drink holder and remove screw cover panel at bottom of radio bezel, extract (2) phillips screws from behind.
2. Using a panel removal tool, unsnap, disconnect, and remove the dash bezel.
3. Extract (4) Phillips head screws securing radio, lift away, disconnect and remove.

**2001-04 Dodge Dakota Extra Cab**

**2000-03 Dodge Durango**

**RADIO REMOVAL:**

1. Extract (2) Phillips screws from top of instrument cluster.
2. Extract (3) T-20 torx screws from bottom dash panel and pull down.
3. Using panel removal tool, carefully pry out dash bezel, disconnect and remove.
4. Extract (4) Phillips screws securing radio, disconnect and remove.

**2000-05 Dodge Neon**

**2000 Plymouth Neon**

**RADIO REMOVAL:**

1. Rotate vents until they unsnap, lift away and remove. Extract (2) screws from behind.
2. Remove temperature control knobs.
3. Unsnap bezel, lift away and remove.
4. Extract (4) screws holding radio in, unplug and remove radio.

**2002-05 Dodge Ram**

**RADIO REMOVAL:**

1. Extract one (1) Phillips Head Screw from below passenger side vent.
2. Extract two (2) PhillipsHead Screws securing knee panel and remove.
3. Use fingers to pull top of trim bezel out, then pry out bottom.

**2001-05 Dodge Stratus**

**RADIO REMOVAL:**

1. Using panel removal tool, carefully pry out radio bezel, disconnect and remove.
2. Extract (4) Phillips head screw securing radio, disconnect and remove.

**1999-04 Jeep Grand Cherokee**

**RADIO REMOVAL:**

1. Carefully pop up out radio/vent trim bezel and remove.
3. Extract (4) screws holding radio in, unplug and remove radio.

**2002-05 Jeep Liberty**

**RADIO REMOVAL:**


1. Remove ashtray and extract (1) Phillips screws, From Behind.
2. Carefully pry out radio bezel using fingers, disconnect and remove.
3. Extract (4) Phillips head screws securing radio, disconnect and remove.



**CR1277**

## IN-DASH INSTALLATION KIT FOR FOR SELECT 1998-04 DODGE/ CHRYSLER/PLYMOUTH/JEEP VEHICLES

**MADE IN  
U.S.A.**

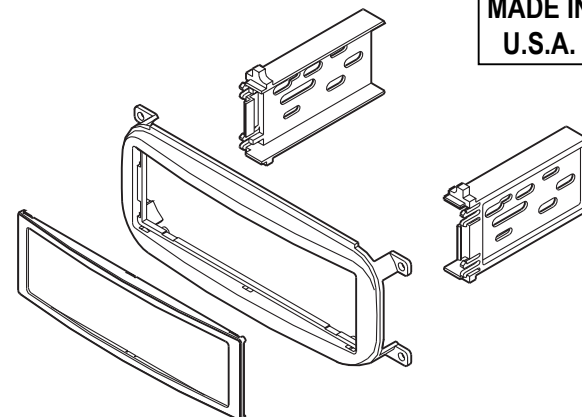

**CHRYSLER**

1999-04	300M	.....	2
1998-01	LHS	.....	2
1998-04	Concorde	.....	2
2001-05	PT Cruiser	.....	2
2001-03	Sebring Conv.	.....	2
2001-05	Sebring Coupe	.....	2
2001-05	Sebring Sedan	.....	2
2001-05	Town & Country	....	2

**DODGE**

2001-05	Caravan	.....	2
2001-04	Dakota Extra Cab	..	2
2000-03	Durango	.....	2
1998-04	Intrepid	.....	2
2000-05	Neon	.....	2
2002-05	Ram	.....	2
2001-05	Stratus	.....	2

**JEEP**

1999-04	Grand Cherokee	...2
2002-05	Liberty	.....2

**PLYMOUTH**

2000	Neon	.....2
2001	Voyager	.....2

## INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche CR1277 Kit. This kit was manufactured with the highest of quality standards.

**CAUTION:**

**DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.**

**NOTES:**

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

**LIABILITY DISCLAIMER**

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/ codes and information pertaining to installation of this kit (#CR1277) in Select 1998-UP Dodge/Chrysler/Plymouth/Jeep Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile during the installation of components while using this booklet.

If you have any further questions, call:

**TECH HELP 1-800-621-3695, ext. 3**

©2017 SCOSCHE INDUSTRIES, INC.

SI 02/17 - CR1277 (3000328)