


STEREO REMOVAL

1. Using a panel removal tool, pry off the radio trim bezel.
2. Remove the (4) torx screws securing the radio to the dash.
Save these screws, they will be used to install the new kit panel.
3. Unplug connectors and remove the factory radio.

STEREO INSTALLATION

ISO DIN MOUNT


1. Snap the 6393L and 6393R brackets to the mounting locations on the 6388 kit panel.
2. Snap the 6391 pocket into the kit panel, and secure it to the 6393L and 6393R brackets using the (2) screws supplied with the installation kit.
3. Position the aftermarket DIN ISO head unit between the 6393L and 6393R brackets and attach it to them using the hardware supplied with the aftermarket radio.
4. Snap the 6390 trim ring over the radio.
5. Plug in radio harness and antenna, slide the new kit into the dash, and attach with the (4) torx screws removed earlier.
6. Install the radio trim bezel.

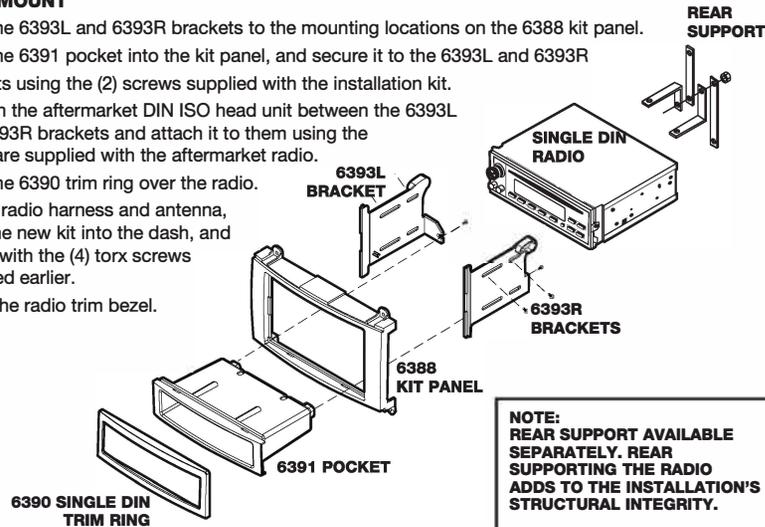

NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.

DOUBLE DIN MOUNT

1. Remove 90 degree pocket mounting tabs from 6393L and 6393R brackets.
2. Snap the 6393L and 6393R brackets to the mounting locations on the 6388 kit panel.
3. Position the aftermarket DOUBLE DIN ISO head unit between the 6393L and 6393R brackets and attach it to them using the hardware supplied with the aftermarket radio.
4. Snap the 6389 trim ring over the radio.
5. Plug in radio harness and antenna, slide the new kit into the dash, and attach with the (4) torx screws removed earlier.
6. Install the radio trim bezel.

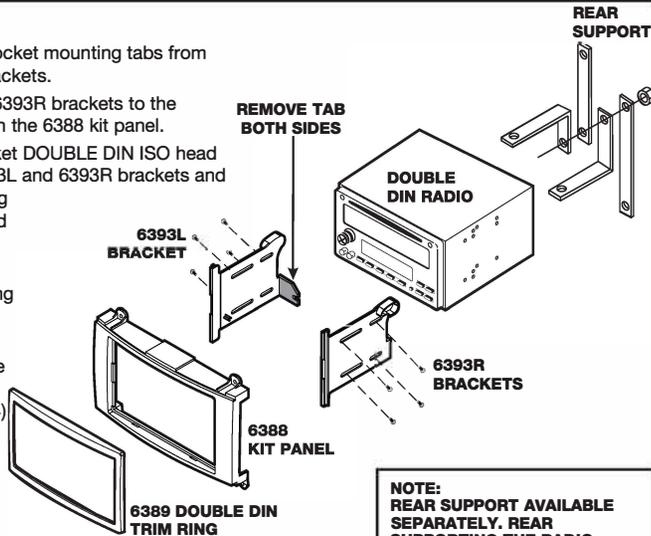


NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.

SCOSCHE

CR1292B

IN-DASH INSTALLATION KIT FOR 2007-UP DODGE SPRINTER

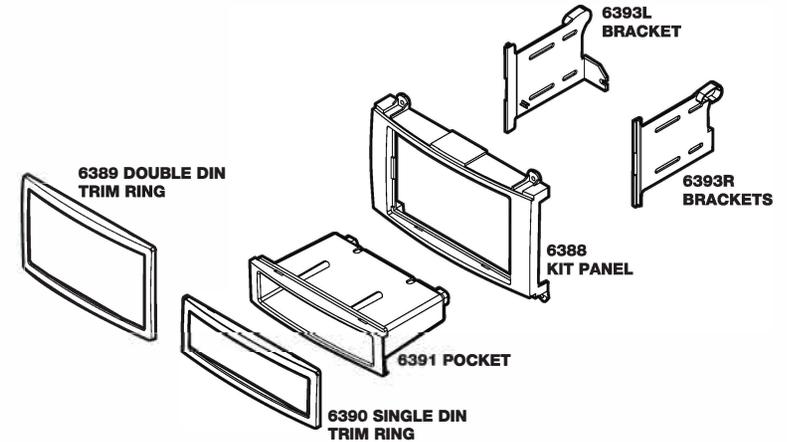

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche CR1292B Kit. This kit was manufactured with the highest of quality standards.

CAUTION: DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com

CAR STEREO CONNECTIONS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

VW03B
2002-Up Volk-
swagen & BMW

VWA3B
VW/European
Antenna Adapter



LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (CR1292B) in 2007-Up Dodge Sprinter Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

© 2007 SCOSCHE INDUSTRIES, INC.

SI 7/07 - CR1292B (3000003)