

<b>1997-UP Ford Club Wagon</b>	<b>1995-97 Lincoln Continental</b>
<b>1995-UP Ford Crown Victoria</b>	<b>1995-98 Lincoln Mark VIII</b>
<b>1997-UP Ford Econoline</b>	<b>1995-99 Lincoln Town Car</b>
<b>2001-UP Ford Escape</b>	<b>1995-UP Mazda B-Series Pickup</b>
<b>2000-UP Ford Excursion</b>	<b>1995-UP Mercury Grand Marquis</b>
<b>1995-01 Ford Explorer 2/4 DR</b>	<b>1996-UP Mercury Mountaineer</b>
<b>1999-04 Ford F-Series Super Duty Pickup</b>	
<b>1995-UP Ford Ranger</b>	

#### RADIO REMOVAL:

1. Insert DIN Removal Tools, spread the tools apart to release factory stereo, slip it out of the dash, unplug and remove radio.

**1999-UP Ford Expedition**  
**1999-UP Ford F-Series Pickup**  
**1998-02 Lincoln Navigator**

#### RADIO REMOVAL:

1. Carefully pry out on radio/dash bezel and unsnap to remove.

**CAUTION: PASSENGER AIRBAG SWITCH DOES NOT UNPLUG ON PICKUP.**

2. Insert DIN Removal Tools, spread the tools apart to release factory stereo, slip it out of the dash and remove radio.

# SCOSCHE®

**FD1423**

## IN-DASH INSTALLATION KIT FOR SELECT 1995-UP FORD VEHICLES

**NOTE:**  
Rear support  
available separately.  
Rear supporting the  
radio adds to the  
installations  
structural integrity.

#### FORD

1997-UP CLUB WAGON  
1995-UP CROWN VICTORIA  
1997-UP ECONOLINE  
2001-UP ESCAPE  
2000-UP EXCURSION  
1999-UP EXPEDITION  
1995-01 EXPLORER 2/4 dr  
1999-UP F-SERIES PICKUP  
1999-04 F-SERIES SUPER DUTY  
PICKUP  
1995-UP RANGER

#### LINCOLN


1995-97 CONTINENTAL  
1998-02 NAVIGATOR  
1995-98 MARK VIII  
1995-99 TOWN CAR

#### MAZDA

1995-UP B SERIES PICKUP

#### MERCURY

1995-UP GRAND MARQUIS  
1996-UP MOUNTAINEER

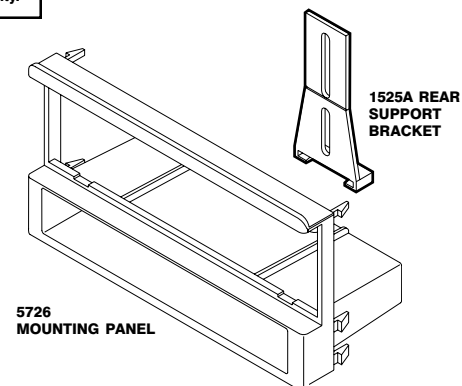

## WIRE CODES

**NOTE:** For Factory Wiring Codes go to: [www.scosche-cars.com](http://www.scosche-cars.com)

## INTRODUCTION

This premium installation kit is for 1995-UP select Ford vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

#### CAUTION:

**DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.**

#### NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

#### LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (FD1423) in Select 1995-UP Ford Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call:  
©2004 SCOSCHE INDUSTRIES, INC.

**TECH HELP 1-800-621-3695 x3**

SI 11/04 - FD1423 (3000003)