


**IN-DASH DIN STEREO INSTALLATION KIT FOR
2008 FORD ESCAPE & MAZDA TRIBUTE**

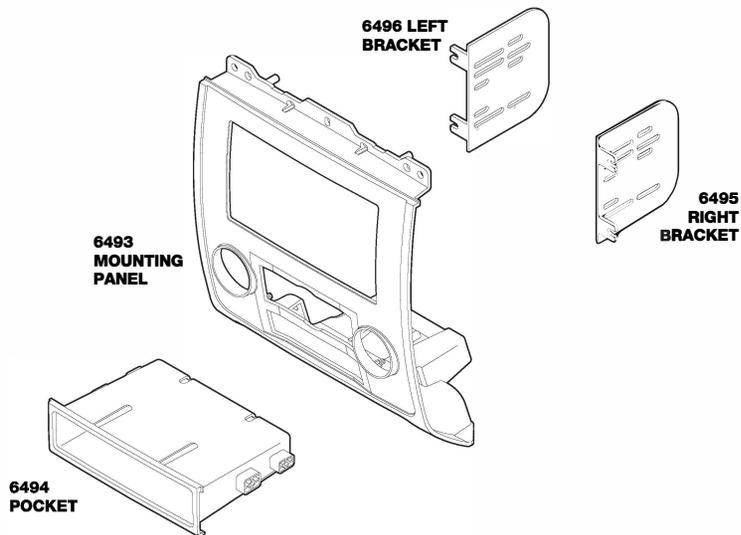

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2008 Ford Escape & Mazda Tribute vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION
DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

- NOTES**
- See your vehicle's instructions for any special tools your installation might require.
 - Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com

CAR STEREO CONNECTORS	
PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.	
FD23B 2003-Up Ford	CRAB 2002-Up Chrysler/Jeep Antenna Adapter

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (FD1436B/FD1436BLKB) in 2008 Ford Escape & Mazda Tribute vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

FACTORY STEREO REMOVAL


2008 FORD ESCAPE / 2008 MAZDA TRIBUTE

1. Use a panel removal tool (PRT) to unsnap upper vent panel. Start from windshield and pull toward you.
2. Use a PRT to unsnap dash panel below stereo.
3. Extract (4) 7mm hex head screws securing stereo panel.
4. Use 8mm wrench to remove ground strap from passenger side of stereo.
5. Unplug and reemove stereo.
6. Extract (4) T-20 Torx head screws securing stereo brackets.
7. Extract (4) T-20 Torx head screws securing A/C controls.

MOUNTING THE STEREO

ATTACHING THE SINGLE DIN STEREO

1. Secure the 6494 pocket to the 6495 & 6496 brackets with the (4) supplied screws. (See Fig. 1)
2. Mount the stereo to the brackets with the aftermarket stereo's supplied screws.
3. Screw Single DIN stereo/bracket/pocket assembly into dash using the (4) screws that were removed from the dash assembly.
4. Attach A/C controls to 6493 panel using the (4) factory Torx head screws.

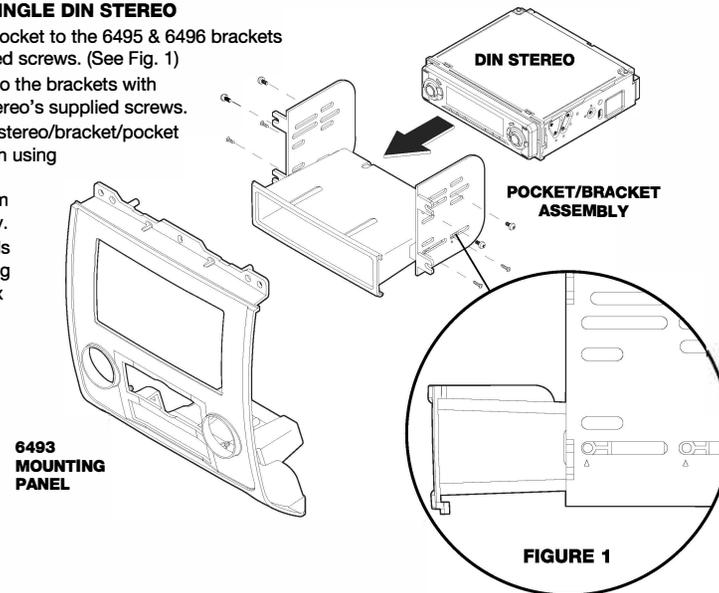

**ATTACHING THE
DOUBLE DIN STEREO**

1. Align the aftermarket stereo with the 6495 & 6496 brackets.
2. Secure the stereo to the brackets using the aftermarket stereo's supplied screws.
3. Screw Double DIN stereo/bracket assembly into dash using the (4) screws that were removed from the dash assembly.
4. Attach A/C controls to 6493 panel using the (4) factory Torx head screws.

