

IN-DASH INSTALLATION KIT FOR 2004-11 SELECT GM VEHICLES

VEHICLE APPLICATIONS:

BUICK	PAGE	CHEVROLET (Con't)	PAGE	PONTIAC	PAGE
2008-11 ENCLAVE.....	4	2008-11 MALIBU.....	6	2009 G3.....	4
2006-11 LUCERNE.....	4	2006-07 MONTE CARLO.....	6	2007-09 G5.....	4
CHEVROLET		2007-11 SILVERADO 1500- 3500 PICKUP.....	4	2005-09 G6.....	6
2007-11 AVALANCHE.....	4	2007-11 SUBURBAN.....	4	2006-09 SOLSTICE.....	6
2007-08 AVEO LT (Sedan Only).....	4	2007-11 TAHOE.....	4	2006 TORRENT.....	4
2009-11 AVEO.....	4	2009-11 TRAVERSE.....	4	2007-09 TORRENT.....	5
2005-11 COBALT.....	4	GMC		SATURN	
2005-06 EQUINOX.....	4	2007-11 ACADIA.....	4	2007-09 AURA.....	7
2007-11 EQUINOX.....	5	2008-11 SAVANA.....	5	2006-07 ION.....	7
2008-11 EXPRESS VAN.....	5	2007-11 SIERRA 1500-3500 PICKUP/DENALI.....	4	2007-09 OUTLOOK.....	4
2006-11 HHR.....	5	2007-11 YUKON/XL/DENALI.....	4	2007-09 SKY.....	7
2006-11 IMPALA/SS.....	5	HUMMER		2006-07 VUE.....	8
2004-07 MALIBU/MAXX.....	5	2008-09 H2.....	6	2008-09 VUE.....	8
				SUZUKI	
				2007-09 XL7.....	8

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2004-11 Select GM vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

CAR STEREO CONNECTORS		GM13SR	
PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS. GM13SR 2004-up select 11-bit stereo replacement interface GM22SR 2006-up GM LAN Stereo Replacement Interface (NON Onstar)			
CRAB 2002-up Chrysler/Jeep Antenna Adapter		GM22SR 	
		CRAB 	




IMPORTANT!
DO NOT RETURN PRODUCT TO THE RETAILER
 IF YOU NEED ASSISTANCE OR REPLACEMENT PARTS
CALL US TOLL FREE: 1-800-621-3695 X3
HOURS MON-FRI 8AM-5:30PM (PST) SATURDAY 8AM-2PM (PST)

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (GM2500B) in 2004-10 Select GM vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

GM2500B KIT OVERVIEW

A. COMPONENTS IN KIT:

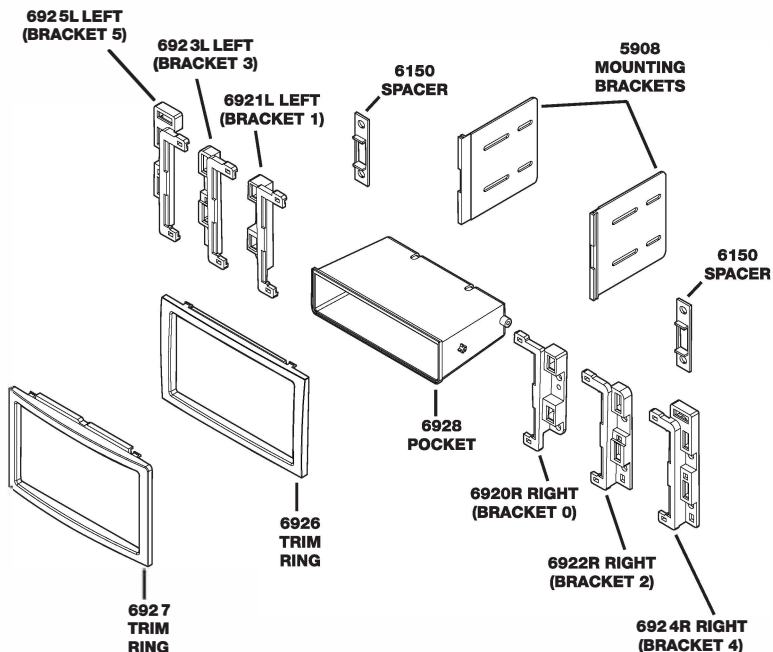

B. KIT PANEL ASEMBLY

1. Look up specific vehicle disassembly to find out which side brackets and trim ring to use.
2. Snap the 5908 brackets to the appropriate side brackets by hooking into the bottom portion in first and swinging the top in until it snaps into place. (See Figure 1)
3. After completing step 2 for both side brackets, snap them to the appropriate trim ring. (See Figure 2)

FIGURE 1


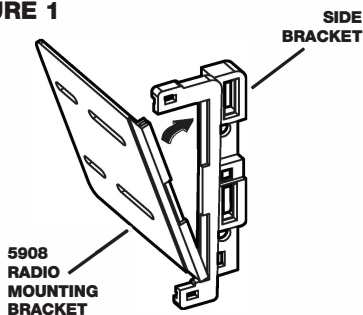


FIGURE 2

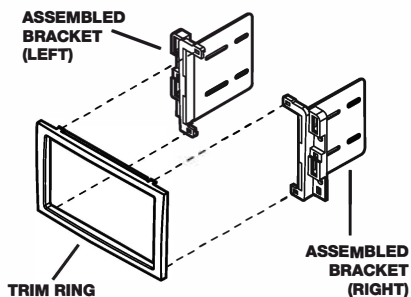


MOUNTING THE STEREO

For instructions on removing your vehicle's factory stereo, see next section.

REMOVE SLEEVE FROM AFTERMARKET STEREO

1. Locate the locking mechanism on your DIN stereo sleeve (typically) on the side.
2. Slip mounting sleeve towards rear of stereo and remove.

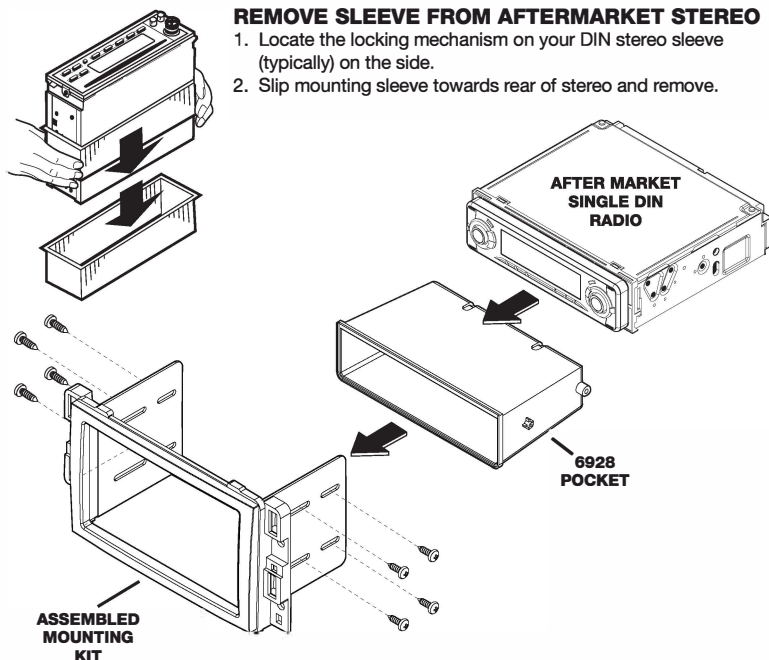


SINGLE-DIN RADIO ASSEMBLY

1. Align 6928 pocket to the lower slots of kit brackets and install the (2) supplied screws into the back posts, securing the pocket into place. (Front of pocket should rest flush to the back of trim ring opening)
2. Align aftermarket radio to upper slots of kit brackets and secure into place using screws supplied with aftermarket radio.

DOUBLE-DIN RADIO ASSEMBLY

Align aftermarket radio to slots of kit brackets and secure into place using screws supplied with aftermarket radio.

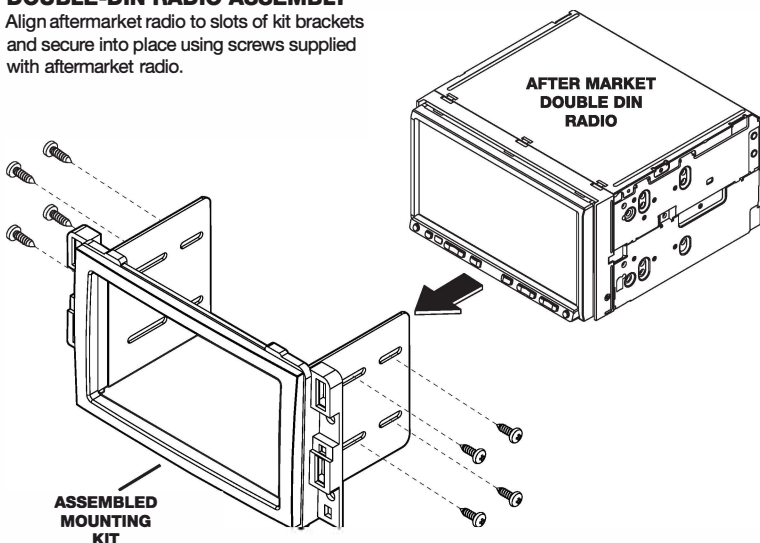

FACTORY STEREO REMOVAL

2008-11 BUICK ENCLAVE
2009-11 CHEVROLET TRAVERSE
2007-11 GMC ACADIA
2007-09 SATURN OUTLOOK

RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
2. Use a panel removal tool to carefully unsnap dash/radio bezel.
3. Unplug and remove panel
4. Extract (4) 7mm hex head screws securing the radio, unplug and remove radio.

2006-11 BUICK LUCERNE

RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
2. Using a panel removal tool to carefully unsnap the trim bezel around the radio and HVAC controls.
3. Extract (3) 9/32"-7mm hex head screws securing the HVAC controls to the dash. Disconnect and remove.
4. Extract (4) 9/32"-7mm screws securing the radio to the dash. Disconnect and remove.

2007-11 CHEVROLET AVALANCHE	2007-11 CHEVROLET TAHOE
2007-11 CHEVROLET SILVERADO	2007-11 GMC SIERRA/DENALI
2007-11 CHEVROLET SUBURBAN	2007-11 GMC YUKON/XL/DENALI

RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
2. Using a panel removal tool, unsnap the dash bezel surrounding the factory radio.
3. Extract (8) 9/32" hex screws securing the factory radio.
4. Lift away, disconnect and remove.

2007-08 CHEVROLET AVEO LT (SEDAN ONLY)
2009-11 CHEVROLET AVEO (ALL MODELS)
2009 PONTIAC G3

RADIO REMOVAL

1. Use brackets 0 & 1 and trim ring 6926.
2. Using a panel removal tool, unsnap the bezel around the shifter and remove.
3. Extract (4) Phillips head screws securing the radio, disconnect and remove.

2005-11 CHEVROLET COBALT
2007-09 PONTIAC G5

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. Open glove box. Using a panel removal tool, carefully unsnap dash trim bezel, lift away and remove.
3. Using a panel removal tool, unsnap driver knee panel, lift away, disconnect and remove.
4. Using a panel removal tool, unsnap dash trim bezel on right side of steering wheel, lift away, disconnect and remove.
4. Using a panel removal tool, unsnap dash bezel, lift away and remove.
5. Extract (4) 7mm hex bolts securing radio, lift away, disconnect and remove.

2005-06 CHEVROLET EQUINOX
2006 PONTIAC TORRENT

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
 2. Unsnap dash surrounding radio, A/C and shifter. Disconnect and remove.
 3. Remove (4) 9/32" bolts securing radio. Disconnect and remove.
-

FACTORY STEREO REMOVAL (cont'd)

2007-11 CHEVROLET EQUINOX

2007-09 PONTIAC TORRENT

RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
2. Slide chrome ring down on shifter knob.
3. Remove Allen Head screw.
4. With PRT unsnap panel on console below window switches
5. With PRT unsnap dash around radio, shifter panel includes ac controls and upper vents
6. Disconnect all harnesses and remove.
7. Remove (4) 7mm screws securing radio, disconnect and remove.

2008-11 CHEVROLET EXPRESS VAN/ GMC SAVANNA


RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
2. Extract (2) 10mm bolts from below knee bolster under steering column and remove panel.
3. Extract (2) 10mm bolts from panel below passenger dash airbag and remove panel.
4. Using a panel removal tool, unsnap and remove panel that surrounds the radio and instrument cluster.
5. Extract (4) 7mm screws securing the radio, disconnect and remove.

2006-11 CHEVROLET HHR

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. Using a panel removal tool, remove panel surrounding window controls in center console.
3. Extract (2) 7mm screws from behind window control panel.
4. Using a panel removal tool, unsnap trim bezel that surrounds the shifter.
5. Using a panel removal tool, unsnap the rest of the lower console surrounding shifter.
6. Using a panel removal tool, unsnap dash bezel that surrounds the factory and HVAC controls. Lift away, disconnect, and remove.
7. Extract (8) 7mm screws securing HVAC controls and factory radio. Lift away, disconnect, and remove.

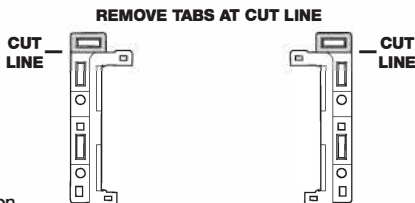

KIT MODIFICATION:

Cut along notches to remove the shaded part on kit, for panel to fit for this application.

2006-11 CHEVROLET IMPALA/SS

RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
2. Using a panel removal tool, remove the trim around the radio.
3. Remove the (6) 7mm hex screws securing the factory radio. Lift away, disconnect and remove.

2004-07 CHEVROLET MALIBU/MAXX

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. Open glovebox, remove (8) 9/32" screws from the inside glove box, and remove trim above glove box using a panel removal tool.
3. Pop off side panel next to door and remove two screws. Remove glove box.
4. Remove trim below key hole.
5. Remove (2) 9/32" screws from under drivers dash panel.
6. Remove side panel from drivers dash using a panel removal tool, and remove (2) 9/32" screws.
7. Drivers side under dash can now be removed.
8. Using a panel removal tool, remove radio dash bezel.
9. Remove (2) 9/32" screws holding A/C controls and remove A/C controls.
10. Remove (4) 9/32" screws holding radio to dash. Disconnect and remove radio.

FACTORY STEREO REMOVAL (cont'd)

2008-11 CHEVROLET MALIBU

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. Using a panel removal tool, unsnap the bezel around the shifter and remove by pulling down and then out. (the bezel hooks under the radio/HVAC panel.
3. Extract (2) 8mm screws located at bottom of HVAC control panel.
4. Using a panel removal tool, unsnap and remove panel that surrounds the radio/HVAC controls, along with upper vent trim, and remove.
5. Extract (6) 8mm screws securing the radio/HVAC controls, disconnect and remove.

2006-07 CHEVROLET MONTE CARLO

RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
2. Using a panel removal tool, remove the trim around the radio and climate controls.
3. Extract (2) Phillips Head screws securing the HVAC controls to the dash. Remove the HVAC controls.
4. Extract (4) Phillips Head Screws securing the radio to the dash. Disconnect and remove.

2008-09 HUMMER H2

RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
2. Using a panel removal tool, unsnap the radio trim panel including the a/c vents, disconnect harnesses and remove panel.
3. Extract (4) 7mm screws securing the climate controls. Unplug and remove the climate controls.
4. Extract (4) 7mm screws securing the radio, disconnect and remove.

2005-09 PONTIAC G6

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. Open glove box, remove (7) 9/32" screws from the inside glove box.
3. Pop off side panel next to door and remove (2) screws. Remove glove box.
4. Remove (3) 9/32" screws from under driver's dash panel.
5. Remove side panel from driver's dash using a panel removal tool. Remove (2) 9/32" screws from behind.
6. Driver's side under dash can now be removed.
7. Using a panel removal tool, remove radio dash bezel.
8. Remove (2) 9/32" screws holding A/C controls and remove A/C controls.
9. Remove (4) 9/32" screws holding radio to dash. Disconnect and remove radio.

2006-09 PONTIAC SOLSTICE

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. Using a panel removal tool, pry, unsnap and remove the cover plate from behind the center console handle located on the right side of the console.
3. Extract (2) 10mm bolts securing the handle.
4. Using a panel removal tool, unsnap the dash bezel surrounding the radio.
5. Lift away, disconnect and remove dash bezel.
6. Remove (4) screws securing the factory radio to the dash, lift away, disconnect and remove.

FACTORY STEREO REMOVAL (cont'd)

2007-09 SATURN AURA

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. Using a panel removal tool, unsnap the trim ring around the shifter and remove.
3. Unsnap the center console bezel that still surrounds the shifter.
4. Extract the (2) screws that are below the HVAC controls.
5. Using a panel removal tool, unsnap and remove the large dash bezel the surrounds the radio/HVAC controls and continues above the glove compartment.
6. Extract the (2) screws from the HVAC controls.
7. Extract another (4) screws securing the radio, disconnect and remove.


2006-07 SATURN ION

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. Using a panel removal tool, remove the trim around the shifter.
3. Using a panel removal tool, remove the top panel of the center console that surrounds the shifter and cup holders.
4. Using a panel removal tool, remove the front dash panel that surrounds the radio and top A/C vents.
Disconnect and remove.
(WARNING: DON'T TURN ON THE IGNITION WITH THE PASSANGER AIRBAG LIGHT PLUG DISCONNECTED. THIS WILL FLAG AN AIRBAG LIGHT CODE).
5. Extract (4) 9/32" bolts securing the radio to the dash. Disconnect and remove.

KIT MODIFICATION:

Cut along notches to remove the shaded part on kit, for panel to fit for this application.

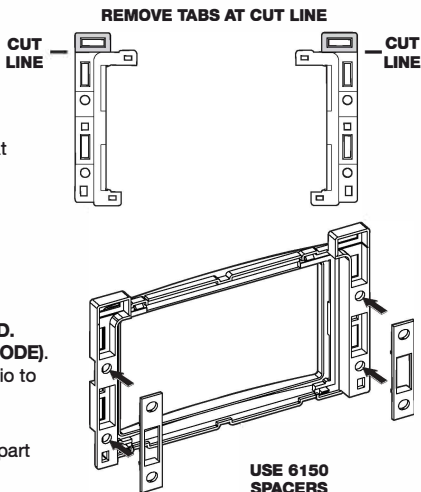

2006-09 SATURN SKY

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. With driver door open, unsnap and remove side panel (using a panel removal tool) from driver's side of the dash.
3. Remove (2) 7mm screws from behind panel.
4. Extract (2) 7mm screws from bottom edge of bezel below steering wheel, unsnap panel and remove panel.
5. With passenger door open, unsnap and remove side panel.
6. Remove (2) 7mm screws from behind panel.
7. Open the glove box and disconnect the glove box dampener. Squeeze sides of glove box together to drop down box.
8. Remove (2) bolt covers from top edge of glove box frame.
9. Extract (5) screws from glove box frame and remove frame.
10. Unsnap and remove climate control trim panel.
11. Remove (1) screw from lower left corner of radio trim panel and unplug connectors to remove panel.
12. Remove (4) screws securing the radio, disconnect and remove.

FACTORY STEREO REMOVAL (cont'd)

2006-07 SATURN VUE

RADIO REMOVAL

1. Use brackets 4 & 5 and trim ring 6927.
2. a) Using a panel removal tool, carefully pry the trim panel around, starting from the front, prying outward and upward.
b) Squeeze the tabs located at the front edge of the shifter trim together, releasing the front edge of the panel from the center console, and remove panel.
3. Extract (4) screws securing storage pocket and remove pocket.
4. Unclip and remove center dash trim panel.
5. Extract (4) screws securing the radio, disconnect and remove.

2008-09 SATURN VUE

RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
2. Using a panel removal tool, unsnap and remove the trim panel above of the radio trim bezel.
3. Extract (2) Phillips screws exposed under panel removed in step 2.
4. Unsnap and remove the radio trim panel including the A/C vents.
5. Unsnap and remove the trim panel surrounding the shifter and disconnect HVAC controls.
6. Extract (4) 7mm screws securing the radio, disconnect and remove.

2007-09 SUZUKI XL7

RADIO REMOVAL

1. Use brackets 2 & 3 and trim ring 6926.
 2. Using a panel removal tool, unclip the shifter leather boot.
 3. Extract (1) screw securing the shifter console panel.
 4. Using a panel removal tool, unsnap shifter console panel and without removing, lift & rotate out of the way.
 5. Unsnap trim bezel around radio using a panel removal tool and remove.
 6. Extract (4) screws securing the radio, unplug and remove.controls.
-