

2009 Mazda "6"

ABOUT THE VEHICLE



Make: Mazda

Model: "6"

Year: 2009

STANDARD/ OPTIONAL

- AM/FM/WMA/MP3 in-dash CD Player

- 3.5mm Aux/mp3 input

- Satellite Radio Capable

- Steering Wheel Controls

- 12 Speaker Amplified Sound System

SCOSCHE®

SPEAKER NOTES

Front Speakers

Dash: 3 1/2"

Door Tweeter: 1"

Lower Door: 6X8"

Speaker Adapter: SA69

Speaker Harness: TBA

Speaker Assembly: (4) 8mm screws.

Dimensions:	Dash	Tweeter	6X8"
L:	3.480	L: 1.406	L: 5.757
W:	3.480	W: 0.630	W: 8.024
D:	1.695	D: 1.406	D: 1.225

Rear Speakers

Lower Door: 6X8

Side Panels: 3 1/2"

Rear Deck: 3 1/2", 8"

Rear Deck Subwoofer: TBA

Speaker Adapter: SA69

Speaker Harness: TBA

Speaker Assembly: (4) 8mm screws.

Dimensions:

	Lower Door	Rear Deck	Subwoofer
L:	5.757	L: 3.478	L: 8.950
W:	8.024	W: 3.478	W: 8.950
D:	1.225	D: 1.620	D: 3.135

APPLICATIONS

Dash Type: New Custom Dash

Aftermarket Type: Single/Double Din

Aftermarket Kit: MA1544B

Harness: MA03B/TBA

Antenna Adapter: HAAB

Amplifier Location: TBA

Auxiliary Input: Inside Center Console

FACTORY COLOR CODES

(+)12v Battery:	Orange/Black
(+)12v Accessory:	Blue/Black
(-) 12v Ground:	Black
(+)12v Amp Turn On:	Data
Left Front Speaker (+):	White/Black
Left Front Speaker (-):	Gray/Black
Right Front Speaker (+):	White/Red
Right Front Speaker (-):	Gray/Red
Left Rear Speaker (+):	White/Purple
Left Rear Speaker (-):	Gray/White
Right Rear Speaker (+):	White
Right Rear Speaker (-):	Gray

2009 Mazda "6"

VEHICLE DISASSEMBLY

PRELIMINARY:

Disconnect the negative battery cable.

Make: Mazda

Model: "6"

Year: 2009

RADIO REMOVAL




1. With Panel Removal Tool, unclip A/C vent Panel above Radio, unplug and remove.
2. With Pick Tool, unclip the shifter release cover.
3. With Panel Removal Tool, unclip cup holder Panel surrounding Parking Brake.
4. With Panel Removal Tool, unclip panel to the right and left of center console (Panels curve up into the dash.)
5. With Panel Removal Tool, unclip panel surrounding shifter.
6. With a small Flat Head Screwdriver, push down on the shifter release and shift to "D".
7. With Panel Removal Tool, unclip Panel surrounding A/C controls, unplug and remove.
8. Remove A/C controls by extracting (4) Phillips Head Screws.
8. Extract (3) Phillips Head Screws and (1) 10mm Screw securing Radio, unplug and remove.

FRONT DOOR TWEETERS



1. With Panel Removal Tool, unclip side mirror/tweeter Panel, unplug and remove.
2. With Pick Tool, unclip tweeter from Panel.

DASH SPEAKERS

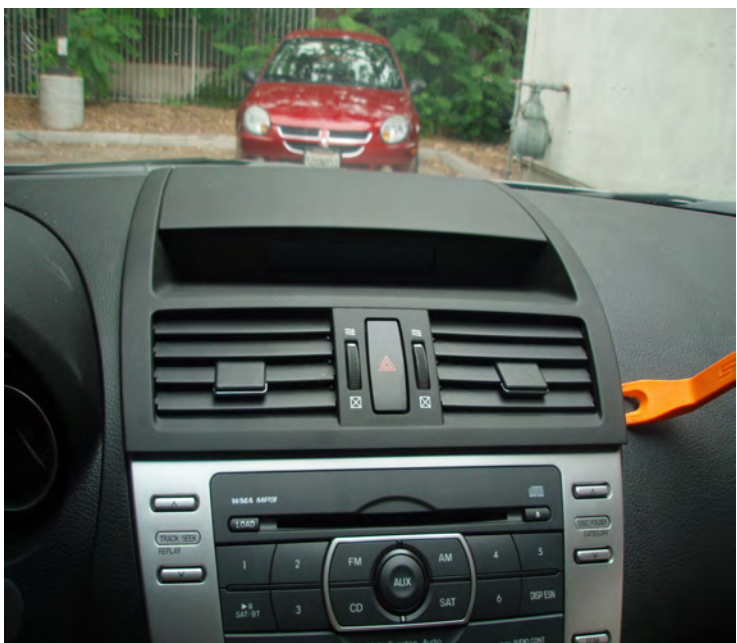

1. With Panel Removal Tool, unclip A/C vent Panel above Radio, unplug and remove.
2. Extract (2) Phillips head Screws securing Speaker and remove.

FRONT DOOR LOWER SPEAKERS



1. With Panel Removal Tool, unclip side mirror/tweeter Panel, unplug and remove.
2. With Pick Tool, unclip panel inside door grip and extract (1) Phillips Head Screw.
3. With Pick Tool, remove plastic mat inside door grip and extract (1) Phillips Head Screw.
4. With Panel Removal Tool, unclip door panel, unplug and remove.
5. Remove Speaker by extracting (4) 8mm screws, unplug and remove.

2009 Mazda "6"

VEHICLE DISASSEMBLY

PRELIMINARY:


Disconnect the negative battery cable.

Make: Mazda

Model: "6"

Year: 2009

REAR DOOR SPEAKERS

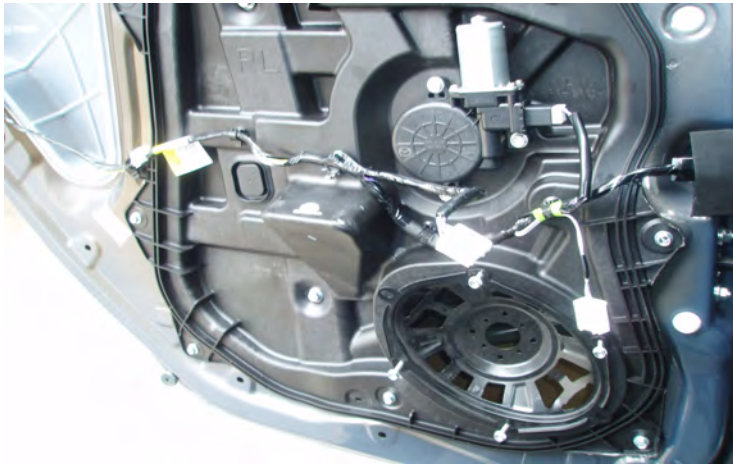

1. With Panel Removal Tool, unclip side mirror/tweeter Panel, unplug and remove.
2. With Pick Tool, unclip panel inside door grip and extract (1) Phillips Head Screw.
3. With Pick Tool, remove plastic mat inside door grip and extract (1) Phillips Head Screw.
4. With Panel Removal Tool, unclip door panel, unplug and remove.
5. Remove Speaker by extracting (4) 8mm screws, unplug and remove.

REAR DECK SPEAKERS/SUB



AMPLIFIER

1. Remove bottom portion of the back seat by pushing on the release tabs located above the floor board under the seat and pull seat forward to remove.
2. Extract (1) 1/2" bolt securing side seat panel, lift then pull forward to remove. (Left and Right Side.)
3. With Panel Removal Tool, unclip Top side panel then with pick tool, unclip airbag safety clip and remove. (Left and Right Side.)
Note: There is a side curtain airbag under this panel.
4. Unplug Rear Deck Stop Light. Plug is accessible through the trunk area.
5. With Pick Tool, unclip (7) plastic clips securing Rear Deck Panel, lift to unclip and pull forward to remove.
6. (Speakers): Extract (2) 8mm screws securing Speakers, unplug and remove.
7. (Subwoofer): Extract (4) 5.5mm screws securing Subwoofer, unplug and remove.